

Chamfer 210

210-2/ 210-3/ 210-4

FIXED NET PHONES





INDEX

1. INSTALLING YOUR PHONE	
1.1 Connecting the base station	8
1.2 Installing and charging the batterie	8
2. GETTING TO KNOW YOUR PHONE	
2.1 Overview of the Handset (for Speakerphone model)	9
2.2 Handset Overview (for non-speakerphone model)	11
2.3 Base Station Overview	13
2.4 Base Station with Telephone Answering Machine (TAM Control)	13
2.5 Display Icons and Symbols	14
2.6 Menu Structure	16
2.7 Text and Digit Entry Table	16
2.7.1 Latin Character Set	17
2.7.2 Polish Character Set	17
2.7.3 Norwegian Character Set	18
2.7.4 Greek Character Set	18
2.7.5 Russian Character Set	19
3. USING YOUR PHONE	
3.1 Make a Call	19
3.1.1 Preparatory Dialing	19
3.1.2 Direct Dialing	19
3.1.3 Call from the phonebook	19
3.1.4 Call from the Call List	20
3.1.5 Call from the redial list	20
3.1.6 Call timer	20
3.2 Answer a Call	20
3.3 End a Call	20
3.4 Adjust Earpiece and Handsfree Volume	20
3.5 Mute a Call	20
3.6 Set the Silent Mode	20
3.7 Turn on the Keypad Lock	20
3.8 Redial the last number	20
3.8.1 Redial a Number from the Redial List	21
3.8.2 Store a Redial Number into the Phonebook	21
3.8.3 Delete a Redial Number	21
3.8.4 Delete the Entire Redial List	21
3.9 Find the Handset	21

3.10 Make an Internal Call	22
3.10.1 Intercom Another Handset	22
3.10.2 Call All Handsets	22
3.10.3 Transfer an External Call to another handset	22
3.10.4 Make a 3-way Conference Call	22
4. PRIVATE PHONEBOOK	22
4.1 Add a New Phonebook Entry	23
4.2 Search a Phonebook Entry	23
4.3 View a Phonebook Entry	23
4.4 Edit a Phonebook Entry	23
4.5 Delete a Phonebook Entry	23
4.6 Delete the Entire Private Phonebook	24
4.7 Check the Phonebook Usage	24
5. CALLER DISPLAY (NETWORK DEPENDENT)	
5.1 View the Call List	24
5.2 Store a Call List Number into the Phonebook	25
5.3 Delete an entry in the Call List	25
5.4 Delete the entire list of the Call List	25
5.5 View the Details of the Call List Entry	25
6. VOICE MAIL (NETWORK DEPENDENT)	
6.1 Access Voice Mail Messages	25
6.2 Delete VMWI Entries	26
7. PHONE SETTINGS	
7.1 Date and Time Settings	26
7.1.1 Change the Date Format	26
7.1.2 Change the Time Format	27
7.1.3 Set the Time	27
7.1.4 Set the Date	27
7.2 Alarm Settings	27
7.2.1 Turn on/off the Alarm	28
7.2.2 Set the Alarm Time (if the Alarm is set to be ON)	28
7.3 Handset Settings	28
7.3.1 Set the Ringer Melody for Internal Calls	28
7.3.2 Set the Ringer Melody for External Calls	28
7.3.3 Set the Ringer Melody for External Calls	29
7.3.4 Set Alert Tones	29
7.3.5 Set the Handset Language	29
7.3.6 Rename the Handset	29

7.3.7 Choose the Information to be Displayed in Idle	30
7.3.8 Set the Auto Answer	30
7.4 Base Settings	30
7.4.1 Set the Base Ringer Melody (Optional)	30
7.4.2 Set the Ringer Volume (Optional)	30
7.4.3 De-register a Handset	30
7.4.4 Change the dial mode	31
7.4.5 Change the Flash Time	31
7.4.6 Change the System PIN Code	31
7.5 Registration	32
7.6 Reset Your Phone	32
8. ANSWERING MACHINE	32
8.1 Turn On/Off the Answering Machine	33
8.2 Listen to the Messages in the Answering Machine	33
8.3 Delete All Messages in the Answering Machine	34
8.4 Record Memo	35
8.5 Answering Machine Settings	35
8.5.1 Set the Answer Mode	35
8.5.2 Set the Outgoing Message Language (Country Dependent)	36
8.5.3 Record Your Own Outgoing Message (OGM)	36
8.5.4 Playback and Delete the Outgoing Message (OGM)	36
8.5.4.1 Playback the OGM	36
8.5.4.2 Delete the Personalized OGM	37
8.5.5 Set the Answer Delay	37
8.5.6 Set the Recording Time of Incoming Message	37
8.5.7 Turn On or Off the Base Screening	38
8.5.8 Change the Compression Rate	38
8.5.9 Activate Remote Access	38
8.5.9.1 Change the 4-Digit Remote Access PIN	38
8.5.9.2 Activate or Deactivate the Remote Access	39
8.5.9.3 Access Your Answering Machine Remotely	39
8.5.10 Call Screening	40
9. DEFAULT SETTINGS	41
10. TROUBLESHOOTING	42
11. GUARANTEE	44
12. CONFORMITY	44

Modelo: Chamfer 210 BASE
210-2/ 210-3/ 210-4
Digital Phone
DECT 1,8 GHz
Instruction Manual

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Read and understand all the instructions.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
- Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- Unplug this product from the wall outlet and refer servicing to Vtech under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.

- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities.
- The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
- Do not use third party charging bays. The batteries may be damaged.
- Please note the correct polarity while inserting the batteries.
- Do not immerse batteries in water, do not place in fire.

PACKAGE CONTENTS

The package contains the following items:


- 1 Handset
- 1 Base station
- 1 AC power adapter
- 1 Telephone line cord
- 2 rechargeable batteries
- 1 User manual

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

The maximum range between the base station and the handset is approximately 300 meters. Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors.


1. INSTALLING YOUR PHONE

1.1 Connecting the base station

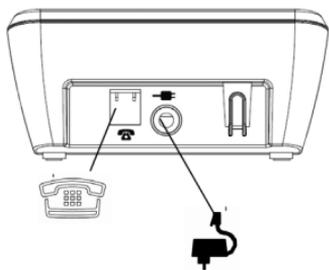

1. Plug the power supply & line cord into the base station.
2. Plug the power supply & line cord into the wall socket.
3. Always use the cables provided in the box.

1.2 Installing and charging the batteries

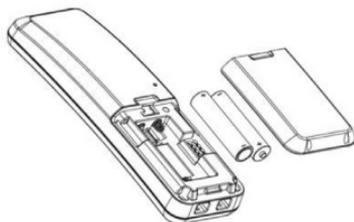


1. Slide open the battery compartment cover.
2. Place the 2 batteries as indicated. Respect polarity.
3. Slide the battery compartment cover back.
4. Put the handset on the base and charge for 14 hours first time.
A beep indicates that the handset is properly placed on the base or charger.

Use only the power pack provided for the base station.
Use only NiMH rechargeable batteries.

2. GETTING TO KNOW YOUR PHONE


2.1 Overview of the Handset (for Speakerphone model)

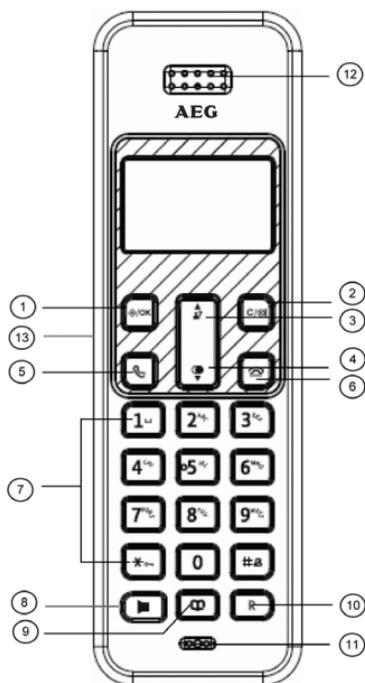

1. **LEFT SOFT KEY (MENU/OK)**
In idle mode: Press to access the main menu
In sub-menu mode: Press to confirm the selection
During a call: Press to access Intercom/ Phonebook/ Redial List/ Call List
2. **RIGHT SOFT KEY (CLEAR/BACK/MUTE/INTERCOM)**
In main menu mode: Press to go back to idle screen
In sub-menu mode: Press to go back to previous level
In sub-menu mode: Press and hold to go back to idle screen
In editing / predialing mode: Press to clear a character / digit
In editing / predialing mode: Press and hold to delete all the characters / digits
During a call: Press to mute / unmute the microphone
In idle mode: Press to intercom another handset
3. **UP**
In idle mode: Press to access the call list
In menu mode: Press to scroll up the menu items
In Phonebook list / Redial list / Call List: Press to scroll up the list
During a call: Press to increase the volume
In ringing: Press to increase the ringer volume

4. **DOWN**
 In idle mode: Press to access the redial list
 In menu mode: Press to scroll down the menu items
 In Phonebook list / Redial list / Call List: Press to scroll down the list
 During a call: Press to decrease the volume
 In ringing: Press to decrease the ringer volume
5. **TALK ON**
 In idle / predialing mode : Press to make a call
 In Redial list / Call List / Phonebook entry: Press to make a call to the selected entry in the list
 During ringing: Press to answer a call
6. **TALK OFF**
 During a call: Press to end a call and go back to idle screen
 In menu / editing mode: Press to go back to previous menu
 In menu / editing mode: Press and hold to go back to idle screen
 In idle mode: Press and hold to power off the handset
 In idle mode (when the handset is powered off): Press and hold to power on the handset
7. **ALPHANUMERIC KEYPAD, * (STAR), # (HASH)**
 Press to insert a digit / character / * / #
 1 key in idle mode: Press and hold to access the voice mail
 * key in idle mode: Press and hold to enable or disable the keypad lock
- * key during a call (in Pulse mode): Press to switch to tone mode
 # key in Idle mode: Press and hold to turn on / off the ringer
 0 key in idle / predialing / number editing mode: Press and hold to insert a pause
 # key in Call List mode: Press to review caller's number if applicable
8. **SPEAKERPHONE**
 During a call: Press to turn on / off the speakerphone.
 In Idle mode / predialing mode / Redial list / Call List / Phonebook entry: Press to make a call with speakerphone
 During ringing: Press to answer a call with speakerphone
9. **PHONEBOOK**
 In idle mode: Press to access the phonebook list
10. **FLASH**
 In idle / predialing mode: Press to insert a flash
 During a call: Press to dial a flash
11. **MICROPHONE**
12. **EARPIECE**
13. **HEADSET JACK (Optional)**
 Using a headset allows you to talk through a headset microphone and saves you from having to hold the handset during a conversation. Answering calls is the same procedure as normal.

2.2 Handset Overview (for non-speakerphone model)

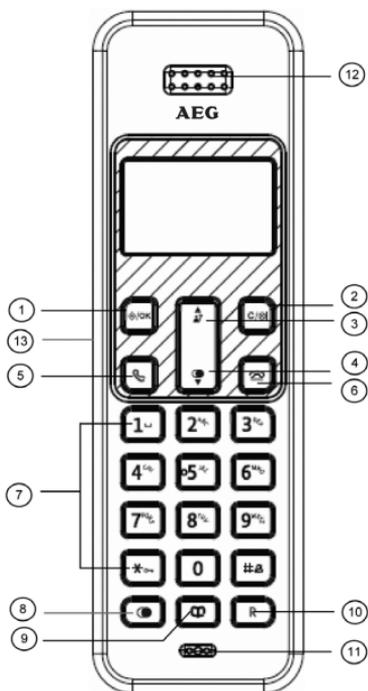


1. **LEFT SOFT KEY (MENU/OK)**
 In idle mode: Press to access the main menu
 In sub-menu mode: Press to confirm the selection
 During a call: Press to access Intercom/ Phonebook/ Redial List/ Call List

2. **RIGHT SOFT KEY (CLEAR/BACK/MUTE/INTERCOM)**
 In main menu mode: Press to go back to idle screen
 In sub-menu mode: Press to go back to previous level
 In sub-menu mode: Press and hold to go back to idle screen
 In editing / predialing mode: Press to clear a character / digit
 In editing / predialing mode: Press and hold to delete all the characters / digits
 During a call: Press to mute / unmute the microphone
 In idle mode: Press to intercom another handset

3. **UP**
 In idle mode: Press to access the call list
 In menu mode: Press to scroll up the menu items
 In Phonebook list / Redial list / Call List: Press to scroll up the list
 During a call: Press to increase the volume
 In ringing: Press to increase the ringer volume


4. **DOWN**
 In idle mode: Press to access the redial list
 In menu mode: Press to scroll down the menu items
 In Phonebook list / Redial list / Call List: Press to scroll down the list
 During a call: Press to decrease the volume
 In ringing: Press to decrease the ringer volume
5. **TALK ON**
 In idle / predialing mode : Press to make a call
 In Redial list / Call List / Phonebook entry: Press to make a call to the selected entry in the list
 During ringing: Press to answer a call
6. **TALK OFF**
 During a call: Press to end a call and go back to idle screen
 In menu / editing mode: Press to go back to previous menu
 In menu / editing mode: Press and hold to go back to idle screen
 In idle mode: Press and hold to power off the handset
 In idle mode (when the handset is powered off): Press and hold to power on the handset
7. **ALPHANUMERIC KEYPAD, * (STAR), # (HASH)**
 Press to insert a digit / character / * / #
 1 key in idle mode: Press and hold to access the voice mail
 * key in idle mode: Press and hold to enable or disable the keypad lock
- * key during a call (in Pulse mode): Press to switch to tone mode
 # key in Idle mode: Press and hold to turn on / off the ringer
 0 key in idle / predialing / number editing mode: Press and hold to insert a pause
 # key in Call List mode: Press to review caller's number if applicable
8. **REDIAL LIST**
 In Idle mode: Press to access the redial list
9. **PHONEBOOK**
 In idle mode: Press to access the phonebook list
10. **FLASH**
 In idle / predialing mode: Press to insert a flash
 During a call: Press to dial a flash
11. **MICROPHONE**
12. **EARPIECE**
13. **HEADSET JACK (Optional)**
 Using a headset allows you to talk through a headset microphone and saves you from having to hold the handset during a conversation. Answering calls is the same procedure as normal.

2.3 Base Station Overview

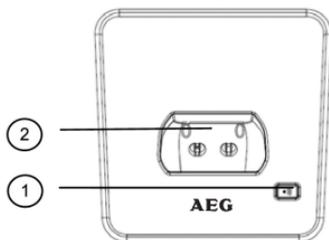

1. PAGE
Press the Page on the base station to page your handset. It will ring for approximately 60 seconds.
2. CHARGING CRADLE

2.4 Base Station with Telephone Answering Machine (TAM) Control

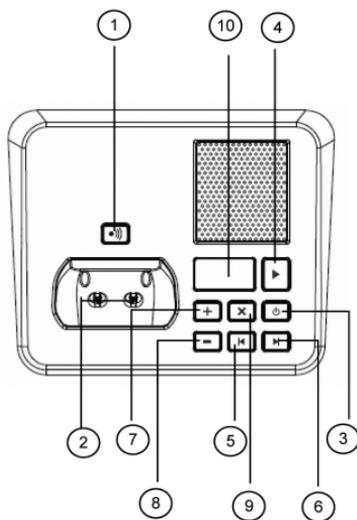

1. PAGE
Press the Page on the base station to page your handset. It will ring for approximately 60.
2. CHARGING CRADLE
3. TAM ON/OFF
Press to turn on the answering machine.
Press again to turn off the answering machine.
4. PLAY/STOP
Press to play the message.
During playback, press stop to stop message playback.
5. SKIP BACKWARD
Press to repeat playing the current message from the beginning. Press twice to skip backward to the previous message.
6. SKIP FORWARD
Press to skip the current message and play the next message.


7. VOLUME UP (+)
Increase (+) speaker volume during message playback.
8. VOLUME DOWN (-)
Decrease (-) speaker volume during message playback.
9. DELETE
Press once to delete the message during playback. Press and hold to delete all the messages.
Note: New voice messages will not be deleted.

10. 7-SEG LED DISPLAY
 - - When answering machine is OFF
 - 00 Steadily ON: No voice messages in TAM.
 - XX Flash: There are XX new voice messages received where XX is from 01 to 59.
 - Steadily ON: Playing the current XX incoming message.
 - XX/FF Flashing XX alternatively with FF: There are XX new voice messages received where XX is from 01 to 59 and the TAM memory is full.
 - Flashing FF only: TAM is full and only old voice messages are kept in the TAM memory.
 - /XX Flashing XX alternatively with - -: Time is not set and there are XX new voice messages received where XX is from 01 to 59.
 - Flashing - only: Time is not set and there are only old voice messages in the TAM memory.
 - YY Steadily ON: There are YY old voice messages (no new voice messages).

A1/A2 Steadily ON: Playing the current outgoing message (OGM) where A1, A2 are the OGM of Answer & Record and Answer Only mode respectively.
 XX/An Flashing XX alternatively with An: XX incoming message is now recording.
 LA Flashing: Remote access is in progress.
 LX Steadily ON: Indicate the current volume level where X is from 1 to 8.

2.5 Display Icons and Symbols

The LCD display gives you information on the current status of the telephone.

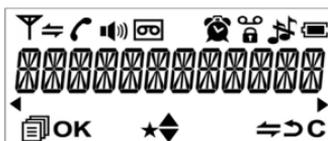

- ◆ Scroll up / down the menu items / Phonebook list / Re-dial list / Call List
- 📞 Steady when the handset is in range of the base. Flash when out of range of the base or not registered to the base.
- ⇌ Steady when an intercom is in progress. Flash when there is an incoming internal call.
- 🔊 Indicate a call is in progress.

- Indicate that handsfree is being used. (for speakerphone model only)
-  (for TAM models only) Indicate when the telephone answering machine (TAM) is turned on. Flash when new TAM messages are received.
 -  Indicate that the ringer is switched off.
 -  Steady when an alarm is set. Flash when the alarm time set before reaches.
 -  Indicate that the keypad is locked.
 -  Indicate when there are received new Visual Message Waiting (VMWI) not yet read. Will disappear when all the visual messages have been read.
 -  Indicate when the battery is fully charged. Whole icon flashes when the battery performs initial charging. Internal block icon flashes when the battery is in final charging stage.
 -  Indicate when the battery needs charging. Flash when low battery power level is detected.
 - ◀ Indicate when more characters are existed before the text currently displayed.
 - ▶ Indicate when more characters are existed after the text currently displayed.
-  (MENU) Press to select more menu options if applicable.
 - OK** Press to confirm the current selection if applicable.
 - ★ Indicate new TAM message / new call in TAM message list / call list.
 -  (INT) Press to conduct Intercom call when idle
 -  (BACK) Press to go back to previous menu level or cancel the current action if applicable
 - C** Press to clear a character or stop the alarm if applicable, press to mute / unmute during a call.

2.6 Menu Structure

In idle mode, press <MENU/OK> will firstly access the Call List menu. Refer to the following for the menu structure.



Main Menu	CALL LIST	PHONE-BOOK	BS SETTINGS	HS SETTINGS	REG.	DEF.	ANS. MACHINE
Sub Menu	Review Call List Under a selected Call List entry: ADD TO PB DELETE DELETE ALL DETAILS	Review phonebook list Under a phonebook entry: ADD VIEW EDIT DELETE DELETE ALL PB STATUS	BS RINGER (Optional) RING VOLUME (Optional) DELETE HS DIAL MODE FLASH TIME CHANGE PIN	ALARM RING SETUP TONE SETUP LANGUAGE RENAME HS HS DISPLAY AUTO ANSWER DATE & TIME	PIN?		MSG PLAYBACK DELETE ALL MEMO TAM ON/OFF TAM SETTINGS ANSWER MODE TAM LANGUAGE OGM SETTINGS ANSWER DELAY RECORD TIME REMOTE ACC. COMPRESSION SCREENING CHANGE PIN

2.7 Text and Digit Entry Table

The following tables show you where each letter and punctuation character can be found. Respective character table will be used when corresponding menu language is selected. This will be helpful when storing a name in the phonebook and renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:

1. Once a character is selected, the cursor will move to the next position after a short pause.
2. You can move the cursor within the text by <UP/DOWN> to amend the text entry.
3. Press <C> to delete the last character.
4. Press and hold <C> to delete the entire text string.

2.7.1 Latin Character Set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
	Key Press	1st	2st	3rd1	4th	5th	6th	7th	8th	9th	
1	Space	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	5							5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, P (Pause)
*	*	?	/	\	()					*
#	#	'	,	-	.	&					#

2.7.2 Polish Character Set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
	Key Press	1st	2st	3rd1	4th	5th	6th	7th	8th	9th	
1	SP	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	Ł	5						5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, P (Pause)
*											*
#											#

2.7.3 Norwegian Character Set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)	
	Key Press	1st	2st	3rd1	4th	5th	6th	7th	8th	9th	10th	
1	SP	-	1									1
2	A	Æ	B	C	2							2
3	D	E	F	3								3
4	G	H	I	4								4
5	J	K	L	5								5
6	M	N	O	6								6
7	P	Q	R	S	7							7
8	T	U	V	8								8
9	W	X	Y	Z	9							9
0	0	Ø										0, P (Pause)
*												*
#												#

2.7.4 Greek Character Set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)	
	Key Press	1st	2st	3rd1	4th	5th	6th	7th	8th	9th	10th	
1	SP	-	1									1
2	A	B	Γ	2								2
3	Δ	E	Z	3								3
4	H	θ	I	4								4
5	K	λ	M	5								5
6	N	Ξ	O	6								6
7	Π	P	Σ	S								7
8	T	Υ	ø	8								8
9	X	ψ	Q	9								9
0	0											0, P (Pause)
*												*
#												#

2.7.5 Russian Character Set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
	Key Press	1st	2st	3rd1	4th	5th	6th	7th	8th	9th	
1	SP	-	1								1
2	A	Б	В	Г	2						2
3	Д	Е	Ж	З	3						3
4	И	Й	К	Л	4						4
5	М	Н	О	П	5						5
6	Р	С	Т	У	6						6
7	Ф	Х	Ц	Ч	7						7
8	Ш	Щ	Ъ	Ы	8						8
9	Ь	Э	Ю	Я	9						9
0	0										0, P (Pause)
*											*
#											#

3. USING YOUR PHONE

3.1 Make a Call

3.1.1 Preparatory Dialing

Enter the phone number and press <TALK ON> or <SPEAKERPHONE> to dial the number. Press <C> to clear the entry.

3.1.2 Direct Dialing

Press <TALK ON> or <SPEAKERPHONE> to take the line and enter the phone number.

3.1.3 Call from the phonebook

Press <PHONEBOOK> to access the phonebook and press <UP/DOWN> to select the desired phonebook entry.

Press <TALK ON> or <SPEAKERPHONE> to dial out to the selected phonebook entry. Alternatively, press <MENU/OK> to access the phonebook to get the desired phonebook entry.

3.1.4 Call from the Call List

Press <UP> to access the Call List and press <UP/DOWN> to select the desired Call List entry. Press <TALK ON> or <SPEAKERPHONE> to dial out to the selected Call List entry. Alternatively, press <MENU/OK> to access the Call List from the main menu.

3.1.5 Call from the redial list

Press <DOWN> to access the redial list and press <UP/DOWN> to select the desired redial number. Press <TALK ON> or <SPEAKERPHONE> to dial out to the selected redial number.

3.1.6 Call timer

Your handset automatically times the duration of every call. The call timer will display a few seconds after the call has made. It is shown in hours, minutes and seconds format (HH:MM:SS).

3.2 Answer a Call

If the handset is not on the charging cradle:

When the phone rings, press <TALK ON> / <SPEAKERPHONE> to answer a call.

If the handset is on the charging cradle or the base station and if **AUTO ANSWER** is set to ON:

When the phone rings, pick up the handset to answer a call.

3.3 End a Call

During a call connection, press <TALK OFF> to end the call.

OR

Put the handset on the base station to end the call.

3.4 Adjust Earpiece and Handsfree Volume

There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for each of earpiece and handsfree volume.

During a call: Press <UP/DOWN> to select volume 1-5.

The current setting is shown. When you end the call, the setting will remain at the last selected level.

3.5 Mute a Call

You can talk to someone nearby without letting the caller hear you during a call.

During a call: Press <C> to mute the microphone and "MUTED" will display on the LCD. Your caller cannot hear you.

Press <C> again to unmute the microphone.

3.6 Set the Silent Mode

In idle, press and hold <HASH> to turn off the handset ringer. The "RINGER OFF" icon is displayed on the LCD.

3.7 Turn on the Keypad Lock

In idle, press and hold <STAR> to turn on the keypad lock. The "KEYPAD LOCK" icon is displayed on the LCD.

3.8 Redial the last number

You can redial up to 51 of the last numbers called. If you have stored a name in the phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

3.8.1 Redial a Number from the Redial List

1. In idle mode, press <DOWN> to access the redial list. Remarks: If redial entry with name, press <HASH> to view the number.
2. Press <UP/DOWN> to browse the redial list.
3. Press <TALK ON> / <SPEAKERPHONE> to dial to the selected redial number.

Note: If there are no numbers in the redial list, the display shows "EMPTY".

3.8.2 Store a Redial Number into the Phonebook

1. Follow Steps 1 and 2 in section 3.8.1.
2. Press <MENU> and <UP/DOWN> to select **ADD TO PB**.
3. Press <OK> to enter the name.
4. Press <OK> to store the redial number into the phonebook.
5. Press <OK> to select phonebook melody.
6. Press <UP/DOWN> to browse the melody list. The respective melody will be played when browsing the melody list.
7. Press <OK> to confirm.

3.8.3 Delete a Redial Number

1. Follow Steps 1 and 2 in section 3.8.1.
2. Press <MENU> and <UP/DOWN> to select **DELETE**.
3. Press <OK> to confirm.

3.8.4 Delete the Entire Redial List

1. Follow Steps 1 and 2 in section 3.8.1.

2. Press <MENU> and <UP/DOWN> to select **DELETE ALL**.

3. Press <OK> to confirm.

4. Press <OK> to confirm again.

3.9 Find the Handset

You can locate the handset by pressing <PAGE> on the base station. All the handsets registered to the base will produce the paging tone and "PAGING" is displayed on the LCD. You can stop the paging by pressing <TALK ON> / <TALK OFF> / <C> / <SPEAKERPHONE> (Only for speakerphone model) on any handset or <PAGE> on the base again.

Note: If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

3.10 Make an Internal Call

This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling handset will return to standby mode.

Note: If only one handset is registered to the base station, press <INT> will display "NOT POSSIBLE".

3.10.1 Intercom Another Handset

1. In idle mode, press <INT> and the registered handsets will display except the calling handset.
2. Enter the desired handset number to intercom with.
3. The called handset rings and press <TALK ON> on the called handset to establish the internal call.

Note: If two handsets are registered to the base station, press <INT> will connect to another handset immediately.

3.10.2 Call All Handsets

1. In idle mode, press <INT> and the registered handsets will display.
2. Press <KEY 9> to ring to all registered handsets.

3.10.3 Transfer an External Call to another handset

During an external call:

1. Press <MENU> and <UP/DOWN> to select **INTERCOM**.
2. Press <OK> to select the desired handset to intercom with.
3. The external call is put on hold automatically and the called handset rings.
4. Press <TALK ON> on the called handset to establish an internal call.

5. Press <TALK OFF> on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
6. The external call is transferred to the called handset.

3.10.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required. During an external call:

1. Follow Steps 1 to 4 in section 3.10.3.

Press and hold <STAR> on the calling handset to establish the conference call.

Any handset hangs up during a conference call will leave the other handset still in connection with the external call.

4. PRIVATE PHONEBOOK

Your phone can store up to 202 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. Phonebook entries are stored alphabetically by name.

4.1 Add a New Phonebook Entry

In idle:

1. Press <PHONEBOOK> to access the phonebook.
OR
Press <MENU> and <UP/DOWN> to select **PHONEBOOK** main menu item and then press <OK> to access the phonebook.
2. Press <MENU> to select **ADD**.
3. Press <OK> to enter the name.
4. Press <OK> to enter the number.
5. Press <OK> and <UP/DOWN> to select the desired ringtone for your phonebook entry.
6. Press <OK> to store the phonebook entry.

4.2 Search a Phonebook Entry

In idle:

1. Press <PHONEBOOK> to access the phonebook.
2. Enter the first character of the name by multi-tap.

4.3 View a Phonebook Entry

In idle:

1. Press <PHONEBOOK> to access the phonebook.
2. Press <UP/DOWN> to select the desired phonebook entry.

1. Press <MENU> and <UP/DOWN> to select **VIEW**.
2. Press <OK> and <UP/DOWN> to review the name, number and melody of the selected phonebook entry.

Note: If number is more than 12 digits, press <LEFT SOFT KEY> or <RIGHT SOFT KEY> to view the remaining digits.

4.4 Edit a Phonebook Entry

In idle:

1. Press <PHONEBOOK> to access the phonebook.
2. Press <UP/DOWN> to select the desired phonebook entry.
3. Press <MENU> and <UP/DOWN> to select **EDIT**.
4. Press <OK> and the current contents of the selected phonebook entry displays.
5. Edit the name and press <OK>.
6. Edit the number and press <OK>
7. Press <UP/DOWN> to select the ringtone and press <OK> to confirm.

4.5 Delete a Phonebook Entry

In idle:

1. Press <PHONEBOOK> to access the phonebook.
2. Press <UP/DOWN> to select the desired phonebook entry.

3. Press <MENU> and <UP/DOWN> to select **DELETE**.

4. Press <OK> to confirm.

4.6 Delete the Entire Private Phonebook

1. Press <PHONEBOOK> to access the phonebook.

2. Press <UP/DOWN> to select the desired phonebook entry.

3. Press <MENU> and <UP/DOWN> to select **DELETE ALL**.

4. Press <OK> to confirm.

5. Press <OK> to re-confirm.

4.7 Check the Phonebook Usage

You can check how many phonebook entries have been occupied in your phone and how many phonebook entries are available for you to store in the phonebook.

1. Press <PHONEBOOK> to access the phonebook.

2. Press <MENU> and <UP/DOWN> to select **PB STATUS**.

3. Press <OK> to confirm.

5. CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed the Caller Line Identification service with your network service provider. Your phone can store up to 103 received calls with date/time information in the Call List. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternatively with the number. The handset will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "WITHHELD" will display. If the caller number is not provided, "OUT OF AREA" will display.

In standby, if three unanswered calls are received, "3 NEW CALLS" will be displayed.

5.1 View the Call List

All received calls are saved in Call List with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with a <* icon> at the centre of the bottom line of the display.

1. Press <UP> to access the call list.
OR
Press <MENU> and <UP/DOWN> to select **CALL LIST**.

2. Press <UP/DOWN> to select the desired entry.
3. Press <#> to view the caller's number if applicable.

5.2 Store a Call List Number into the Phonebook

1. Follow Steps 1 and 2 in Section 5.1
2. Press <MENU> and <UP/DOWN> to select **ADD TO PB**.
3. Press <OK> to enter the name.
4. Press <OK> and the selected call list number is displayed.
5. Edit the number if necessary.
6. Press <OK> and <UP/DOWN> to select the melody.
7. Press <OK> to confirm.

5.3 Delete an entry in the Call List

1. Follow Steps 1 and 2 in Section 5.1
2. Press <MENU> and <UP/DOWN> to select **DELETE**.
3. Press <OK> to confirm.

5.4 Delete the entire list of the Call List

1. Follow Steps 1 and 2 in Section 5.1
2. Press <MENU> and <UP/DOWN> to select **DELETE ALL**.

3. Press <OK> to confirm.
4. Press <OK> to re-confirm.

5.5 View the Details of the Call List Entry

1. Follow Steps 1 and 2 in Section 5.1
2. Press <MENU> and <UP/DOWN> to select **DETAILS**.
3. Press <OK> to display the date and time of the selected call list entry.
4. Press <OK> to go back to previous screen.

6. VOICE MAIL (NETWORK DEPENDENT)

Voice Mail Waiting Indication (VMWI) <VMWI icon> is an indication given to you when a new voice mail message is waiting on the network service provider. This feature is available if you have subscribed to the voice-mail service from your network service provider. You can press and hold <Key 1> to dial out to the voice mail number directly to listen to your voice mail messages.

6.1 Access Voice Mail Messages

<VMWI icon> will display and the VMWI entry is stored in the Call List when you have new message in your voice mailbox.

1. Press <MENU> and <UP/DOWN> to select **CALL LIST**.
OR
Press <UP> in idle to access the call list.

2. Press <UP/DOWN> to select the desired VMWI entry.
3. Press <TALK ON> to dial out to the voice mail server.
2. Press and hold <Key 4> to delete all VMWI entries. The <VMWI icon> will disappear.

Note: If a more recent VMWI entry is received from the same network server number of an existing VMWI entry, the new VMWI will not be stored but the date/time of the VMWI will be updated on the existing VMWI entry. After you have accessed to all new voice mail messages, VMWI will turn off automatically. When the call list is full, the new VMWI entry will replace the oldest non-VMWI entry in the call list.

Note: If you choose **DELETE ALL** function in the call list, the handset will also delete all VMWI entries and CID entries.

6.2 Delete VMWI Entries

To delete a single VMWI entry from the call list:

1. Press <MENU> and <UP/DOWN> to select **CALL LIST**.
OR Press <UP> in idle to access the call list.
2. Press <UP/DOWN> to select the desired VMWI entry.
3. Press <MENU> and <UP/DOWN> to select **DELETE**.
4. Press <OK> to confirm.

To delete all VMWI entries from the call list:

To delete a single VMWI entry from the call list:

1. Press <MENU> and <UP/DOWN> to select **CALL LIST**.
OR Press <UP> in idle to access the call list.

7. PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalize your phone the way you like it to work.

7.1 Date and Time Settings

You will need to set the correct time and date so that you know when you received answering machine (applicable to model with answering machine) or call list entries.

7.1.1 Change the Date Format

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
3. Press <OK> and <UP/DOWN> to select **DATE FORMAT**.
4. Press <UP/DOWN> to select your desired date format (**DD-MM-YY** or **MM-DD-YY**).
5. Press <OK> to confirm.

7.1.2 Change the Time Format

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
3. Press <OK> and <UP/DOWN> to select **TIME FORMAT**.
4. Press <UP/DOWN> to select your desired time format (**12 HR** or **24 HR**).
5. Press <OK> to confirm.

7.1.3 Set the Time

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
3. Press <OK> and <UP/DOWN> to select **SET TIME**.
4. Press <OK> to enter the time information. The time entered will be in the format you set in Section 7.1.2
5. Press <OK> to confirm.

Note: If time has been set before, the current time will display, otherwise, "HH:MM" will display.

7.1.4 Set the Date

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.

2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
3. Press <OK> and <UP/DOWN> to select **SET DATE**.
4. Press <OK> to enter the date information. The date entered will be in the format you set in Section 7.1.1
5. Press <OK> to confirm.

Note: If date has been set before, the current date will display, otherwise, "DD-MM-YY" will display.

7.2 Alarm Settings

You can use this phone to set an alarm clock. When an alarm is set, the <ALARM Icon> displays on the LCD.

When the alarm time is reached, the <ALARM icon> and "ALARM ON" flash on the LCD ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm. If snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold <TALK OFF> to terminate the snooze function.

Note:

- a. Key press is still applicable if handset keypad is locked and when the alarm time is reached.
- b. The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.
- c. During an external call or

internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and "ALARM ON" will still flash. An alarm tone will be emitted from the earpiece to notify user the alarm time is reached. Once user press any key or press and hold <TALK OFF> to disable the alarm, it will revert to the call duration screen.

d. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if snooze function is enabled, the alarm will sound again at the end of the snooze period provided that it's not ringing or in paging mode at the end of the snooze period.

7.2.1 Turn on/off the Alarm

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **ALARM**.
3. Press <OK> and <UP/DOWN> to select **ON/OFF**.
4. Press <OK> to confirm.

Note: If **ON** is selected, you will be asked to set the alarm time.

7.2.2 Set the Alarm Time (if the Alarm is set to be ON)

1. Follow Steps 1 to 4 in Section 7.1.1
2. Enter the alarm time in the time format you set in Section 7.1.2
3. Press <OK> to set the snooze function.

4. Press <OK> and <UP/DOWN> to select **ON** or **OFF**.

5. Press <OK> to confirm.

7.3 Handset Settings

7.3.1 Set the Ringer Melody for Internal Calls

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **RING SETUP**.
3. Press <OK> and <UP/DOWN> to select **INT RING**.
4. Press <OK> and <UP/DOWN> to select the desired ringer melody (a total of 5 melodies for your selection) for setting ringer melody for internal calls. (Notes: a total of 10 melodies for selection in speakerphone mode).
Note: The respective ringer melody will be played while browsing the melody list.
5. Press <OK> to confirm.

7.3.2 Set the Ringer Melody for External Calls

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **RING SETUP**.
3. Press <OK> and <UP/DOWN> to select **EXT RING**.

4. Press <OK> and <UP/DOWN> to select the desired ringer melody (a total of 10 melodies for your selection) for setting ringer melody for external calls.
Note: The respective ringer melody will be played while browsing the melody list.

5. Press <OK> to confirm.

7.3.3 Set the Ringer Melody for External Calls

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **RING SETUP**.
3. Press <OK> and <UP/DOWN> to select **RING VOLUME**.
4. Press <OK> and <UP/DOWN> to select the desired ringer volume (a total of 6 ringer volume levels including **VOLUME OFF**).
Note: The respective ringer volume will be played during your selection.
If **VOLUME OFF** is selected, <Ringer Off> icon will display.

5. Press <OK> to confirm.

7.3.4 Set Alert Tones

A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you

that you need to charge up your battery.

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **TONE SETUP**.
3. Press <OK> and <UP/DOWN> to select **KEY TONE / BATTERY TONE / OUT OF RANGE**.
4. Press <OK> and <UP/DOWN> to turn on or off these tones.
5. Press <OK> to confirm.

7.3.5 Set the Handset Language

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **LANGUAGE**.
3. Press <OK> and <UP/DOWN> to select the desired language.
4. Press <OK> to confirm.

7.3.6 Rename the Handset

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **RENAME HS**.
3. Press <OK> and enter the name of your handset.

4. Press <OK> to confirm.

7.3.7 Choose the Information to be Displayed in Idle

You can choose to display time or handset name in your idle screen.

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **HS DISPLAY**.
3. Press <OK> and <UP/DOWN> to select **HANDSET NAME** or **TIME**.
4. Press <OK> to confirm.

7.3.8 Set the Auto Answer

If you turn on the Auto Answer, you can pick up the call from the cradle without pressing any key.

1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **AUTO ANSWER**.
3. Press <OK> and <UP/DOWN> to turn on or off the auto answer feature.
4. Press <OK> to confirm.

7.4 Base Settings

The current settings are marked with an asterisk which is displayed at the rightmost of the menu item.

7.4.1 Set the Base Ringer Melody (Optional)

1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.

2. Press <OK> and <UP/DOWN> to select **BS RINGER**.

3. Press <OK> and <UP/DOWN> to select the desired ringer melody (a total of 5 melodies for your selection)
Note: The respective ringer melody will be played while browsing the melody list.

4. Press <OK> to confirm.

7.4.2 Set the Ringer Volume (Optional)

1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **RINGER VOLUME**.
3. Press <OK> and <UP/DOWN> to select the desired ringer volume (a total of 6 ringer volume levels including **VOLUME OFF**).
Note: The respective ringer volume will be played during your selection.

4. Press <OK> to confirm.

7.4.3 De-register a Handset

You are requested to enter the 4-digit PIN in order to de-register a handset from the base station. The antenna icon on the de-registered handset will blink.
Note: You cannot de-register the handset that you are currently using.

1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.

2. Press <OK> and <UP/DOWN> to select **DELETE HS**.
3. Press <OK> and you are requested to enter the 4-digit system PIN.
4. Enter the 4-digit system PIN.
Press <OK> and a list of registered handsets is displayed.
5. Press <UP/DOWN> to select one of the handsets that you want to de-register.
6. Press <OK> to confirm.

7.4.4 Change the dial mode

1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **DIAL MODE**.
3. Press <OK> and <UP/DOWN> to select **TONE** or **PULSE**.
4. Press <OK> to confirm.

7.4.5 Change the Flash Time

The flash time settings is country dependent. Please contact your local service provider for the correct settings.

1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **FLASH TIME**.

3. Press <OK> and <UP/DOWN> to select your desired flash time (**SHORT, MEDIUM, LONG**).

Press <OK> to confirm.

7.4.6 Change the System PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.

1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **CHANGE PIN**.
3. Press <OK> and you are requested to enter the 4-digit system PIN.
4. Enter the old system PIN.
5. Press <OK> and enter the new system PIN.

6. Press <OK> and enter the new system PIN again.
Note: If the new PIN entered in Step 6 is not matched with the new system PIN entered in Step 5, user is requested to enter the valid system PIN again in Step 5.

7. Press <OK> to confirm.

7.5 Registration

Your handset and base station is pre-registered. Up to five handsets can be registered to a single base station.

If for some reason, the handset is not registered to the base station (<Antenna icon> flashes even when the handset is near the base station), register your handset according to the following procedure.

1. Press and hold <PAGE> on the base station for about five seconds, the base station is entered into registration mode.
2. Press <MENU> and <UP/DOWN> to select **REGISTRATION**.
3. Press <OK> and you are requested to enter the 4-digit system PIN.
4. Enter the 4-digit system PIN.
5. Press <OK> to confirm.

If the handset registration is successful, you will hear a confirmation tone and the <antenna icon> will stop flashing.

The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the <antenna icon> will still flash.

7.6 Reset Your Phone

You can reset your phone to the default settings. After reset, all your personal settings and call

list entries will be deleted, but your phonebook remains unchanged.

1. Press <MENU> and <UP/DOWN> to select **DEFAULT**.
2. Press <OK> and you are requested to enter the 4-digit system PIN.
3. Enter the 4-digit system PIN.
4. Press <OK> to confirm.
5. Press <OK> to re-confirm.

8. ANSWERING MACHINE

The answering machine feature is only available on certain models within our range.

Please contact your authorised dealer for further details

Your phone includes a telephone answering machine that records unanswered calls when it is on. The LED message counter (two digits seven segment display) on the base will show the number of the messages when the answering machine is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 15 minutes. As well as recording incoming messages, you can record memos for other users of your phone. If the answering machine memory is full, the Handset will display **TAM FULL** and the handset name alternatively in standby, or display **TAM FULL** and the date/time information in standby

which depends on which kind of information (Handset name or Date/Time – See Section 1.33.7) is selected to display in Standby.

8.1 Turn On/Off the Answering Machine

You can turn on or off the answering machine through the base or handset. When the answering machine is set to ON, calls will be answered after the set answer delay and the caller can then leave you a message. When the answering machine is set to OFF, calls will be answered after 10 rings and the answer only message will be played to your callers. They will not be able to leave you a message.

Through the Base:

1. Press <TAM ON/OFF> on the base station.

- If answering machine is set to ON, <TAM ON icon> displays on the handset LCD and the 7-seg LED on the base station will display the number of incoming messages.

- If answering machine is set to OFF, <TAM ON icon> will disappear from the handset LCD and the 7-seg LED on the base station will display - -.

Through the Handset:

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.
2. Press <OK> and <UP/DOWN> to select **TAM ON/OFF**.
3. Press <OK> and <UP/DOWN> to select **ON** or **OFF**.

4. Press <OK> to confirm.

- If answering machine is set to ON, <TAM ON icon> displays on the handset LCD and the 7-seg LED on the base station will display the number of incoming messages.

- If answering machine is set to OFF, <TAM ON icon> will disappear from the handset LCD and the 7-seg LED on the base station will display - -.

8.2 Listen to the Messages in the Answering Machine

When new messages are recorded on the answering machine, <TAM Icon> flashes on the handset display and the message counter on base flashes with the number of new messages in the answering machine until all the new messages are played. Old messages will be played after all new messages are played completely. The message counter LED stays steady to indicate the number of old messages stored in the answering machine.

Listen new messages through the Base:

1. Press <PLAY> on the base station.

The new messages are played from the loudspeaker on the base station in the sequence they are recorded.

3. Press <+> or <-> to increase or decrease the volume during message playback respectively.

Note: If there are no new messages, "00" will display steadily in the message counter on the base. Press <PLAY> will have no effect and an alert tone is emitted.

Listen new messages through the Handset:

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.

2. Press <OK> and <UP/DOWN> to select **MSG PLAYBACK**.

3. Press <OK> to start message playback and the screen displays the date and time information of the message received.

Note: <STAR icon> is placed at the centre of the bottom of the LCD to indicate that it is a new message. If this message has been read or listened, the <STAR icon> will disappear and will be reflected next time when you listen to this message again.

Note: If there are no new messages, "00" will display steadily in the message counter on the base. Press <OK> to display "00--00 00-00" and return back to **ANS. MACHINE** menu.

4. During message playback, press <UP> or <DOWN> to increase or decrease the message playback volume respectively.

Note: After new message is played, the new message will be saved as an old message automatically unless it is deleted.

5. Press <MENU> to select **STOP, FORWARD, PREVIOUS, DELETE** to perform the following functions during message playback.

STOP: Stop the current message playback and return to the **ANS. MACHINE** menu.

FORWARD: Skip to play the next message. The date and time information will display if there is next message.

PREVIOUS: Skip to repeat playing the current message from the beginning. The date and time information of the current message will display.

DELETE: Delete the current message and the next message will be played.

Note: Alternatively, you can use the following shortcut keys to control different operation during message playback.

Press <Key 5> to stop message playback.

Press <Key 4> to skip to repeat playing the current message from the beginning. Press <Key 4> twice to skip backward to the previous message.

Press <Key 6> to skip to play next message.

Press <Key 2> to delete the current message playback.

6. Press <OK> to confirm.

8.3 Delete All Messages in the Answering Machine

Delete all messages through the Base:

In idle:

1. Press and hold <DELETE> on the base station.

2. All the old messages will be deleted.

Note: New messages will not be deleted. If there are no more messages in the answering machine, "00" will display on the base station.

Delete all messages through the Handset:

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.

2. Press <OK> and <UP/DOWN> to select **DELETE ALL**.

3. Press <OK> to confirm.

4. Press <OK> to delete all old messages.

Note: If there are no more messages in the answering machine, "EMPTY" will display and return back to **ANS. MACHINE** menu.

8.4 Record Memo

You can record your memo message for another user. When you record a memo, the message counter will increase by one and the message can be played back in the same way as answering machine messages. Memo recording can still function even when the answering machine is turned off.

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.

2. Press <OK> and <UP/DOWN> to select **MEMO**.

3. Press <OK> to start memo recording and "RECORDING" is displayed.

4. Press <OK> to stop memo recording and save the memo.

OR

Press <C> to stop memo recording without saving and return back to **ANS. MACHINE** menu.

8.5 Answering Machine Settings

You can use the **TAM SETTINGS** menu through the handset to change the settings of your answering machine.

8.5.1 Set the Answer Mode

By default, the answer machine is set in **ANS & REC** mode which allows callers to leave a message. This mode can be changed to **ANSWER ONLY** which does not allow callers to leave a message. In that case, your callers will be prompted to call back later.

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.

2. Press <OK> and <UP/DOWN> to select **TAM SETTINGS**.

3. Press <OK> and <UP/DOWN> to select **ANSWER MODE**.

4. Press <OK> and <UP/DOWN> to select **ANS & REC** or **ANSWER ONLY**.

5. Press <OK> to confirm.

8.5.2 Set the Outgoing Message Language (Country Dependent)

The answering machine announces the outgoing message when it answers a call. There is a pre-set OGM for each of ANS & REC mode or ANSWER ONLY mode. You are able to select your desired OGM language to playback.

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.
2. Press <OK> and <UP/DOWN> to select **TAM SETTINGS**.
3. Press <OK> and <UP/DOWN> to select **TAM LANGUAGE**.
4. Press <OK> and <UP/DOWN> to select your desired OGM language.
5. Press <OK> to confirm.

8.5.3 Record Your Own Outgoing Message (OGM)

You can record your own OGM for ANS & REC mode or ANSWER ONLY mode. When you record your own OGM, it will be used when the answering machine answers the call. If your personalized OGM is deleted, the preset OGM will be restored automatically.

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.
2. Press <OK> and <UP/DOWN> to select **TAM SETTINGS**.

3. Press <OK> and <UP/DOWN> to select **OGM SETTINGS**.
4. Press <OK> and <UP/DOWN> to select **ANS & REC** or **ANSWER ONLY**.
5. Press <OK> and <UP/DOWN> to select **RECORD MESS**.
6. Press <OK> to start recording your personalized OGM and "RECORDING" is displayed on the screen.
7. Press <OK> to stop and save your personalized OGM. Your newly saved OGM will playback automatically. Alternatively, press <BACK icon> to return to previous screen without saving the personalized OGM.

8.5.4 Playback and Delete the Outgoing Message (OGM)

You can playback your own personalized OGM or the pre-set OGM for ANS & REC mode or ANSWER ONLY mode and choose to delete your personalized OGM during playback and record a new one whenever you want. Please note that pre-set OGM cannot be deleted.

8.5.4.1 Playback the OGM

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.
2. Press <OK> and <UP/DOWN> to select **TAM SETTINGS**.

3. Press <OK> and <UP/DOWN> to select **OGM SETTINGS**.
4. Press <OK> and <UP/DOWN> to select **ANS & REC** or **ANSWER ONLY**.
5. Press <OK> and <UP/DOWN> to select **PLAYBACK**.
6. Press <OK> to playback your personalized OGM (if you have recorded a personalized OGM before) and "**PLAYING OGM**" is displayed on the screen.
7. Press <OK> to stop the OGM playback and return to the previous menu.
Note: If a personalized OGM is not recorded before, the pre-set OGM will be played.

8.5.4.2 Delete the Personalized OGM

1. Repeat Steps 1 to 6 in Section 8.5.4.1
2. Press <C> to delete your personalized OGM and return to previous menu and the pre-set OGM is restored automatically.

Note: If pre-set OGM is playing, you are not allowed to delete the pre-set OGM and thus <C icon> will not display. Only <OK icon> will display.

8.5.5 Set the Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to eight rings or **TIME SAVER**.

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.
2. Press <OK> and <UP/DOWN> to select **TAM SETTINGS**.
3. Press <OK> and <UP/DOWN> to select **ANSWER DELAY** (Available options: 2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS or **TIME SAVER**).
4. Press <OK> and <UP/DOWN> to select your desired answer delay.
5. Press <OK> to confirm.

8.5.6 Set the Recording Time of Incoming Message

You can set the maximum length of the recording time of the incoming messages.

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.
2. Press <OK> and <UP/DOWN> to select **TAM SETTINGS**.
3. Press <OK> and <UP/DOWN> to select **RECORD TIME** (Available options: 60S, 120S, 180S, or **UNLIMITED**).
4. Press <OK> and <UP/DOWN> to select your desired recording time.
5. Press <OK> to confirm.

8.5.7 Turn On or Off the Base Screening

You can select to turn on or off the call screening on base through the TAM SETTINGS menu on your handset.

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.
2. Press <OK> and <UP/DOWN> to select **TAM SETTINGS**.
3. Press <OK> and <UP/DOWN> to select **SCREENING**.
4. Press <OK> and <UP/DOWN> to select **ON** or **OFF**.
5. Press <OK> to confirm.

8.5.8 Change the Compression Rate

Three different compression rates (HIGH, MID and LOW) are provided for you to select different quality levels of recording incoming message. The lower the compression rate, the higher the recording quality level attained.

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.
2. Press <OK> and <UP/DOWN> to select **TAM SETTINGS**.
3. Press <OK> and <UP/DOWN> to select **COMPRESSION**.
4. Press <OK> and <UP/DOWN> to select your desired compression rate.

5. Press <OK> to confirm.

8.5.9 Activate Remote Access

Your phone lets you check your messages, or otherwise operate your answering machine, by calling the answering machine when you are away from home by entering a 4-digit remote access PIN on a tone-dialing phone. Use the 4-digit remote access PIN code to prevent other people from unauthorized access of your answering machine.

8.5.9.1 Change the 4-Digit Remote Access PIN

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.
2. Press <OK> and <UP/DOWN> to select **TAM SETTINGS**.
3. Press <OK> and <UP/DOWN> to select **CHANGE PIN**.
4. Press <OK> to enter the Old PIN. (Default Remote Access PIN is 0000).
5. Press <OK> to enter the New PIN.
6. Press <OK> to enter the New PIN again.
Note: If the new PIN entered in Step 6 is not matched with the new system PIN entered in Step 5, user is requested to enter the valid system PIN again in Step 5.
7. Press <OK> to reconfirm.

8.5.9.2 Activate or Deactivate the Remote Access

1. Press <MENU> and <UP/DOWN> to select **ANS. MACHINE**.
2. Press <OK> and <UP/DOWN> to select **TAM SETTINGS**.
3. Press <OK> and <UP/DOWN> to select **REMOTE ACCESS**.
4. Press <OK> and <UP/DOWN> to select **ON** or **OFF** to turn on or off the remote access respectively.
5. Press <OK> to confirm.

8.5.9.3 Access Your Answering Machine Remotely

You can ring your Chamfer from another tone-dialing phone to switch on or off the answering machine and listen to your messages remotely.

1. Place a call from a tone-dialing phone to your **Chamfer**.
2. When the answering machine answers the calls and starts playing the OGM, press <KEY *>. Note: Enter the * while OGM is still playing and proceed the following in order to access the answering machine remotely.
3. Enter the 4-digit Remote Access PIN. Note: If the 4-digit Remote Access PIN is entered incorrectly three times consecutively, the line will be released automatically.

4. Press the following keys to carry out your desired function.

Key	Functions
While message is not playing	
5	Play the message
7	Turn on the answering machine
9	Turn off the answering machine
*	Enter the 4-digit remote access PIN

While message is playing	
2	Delete the current message playback
4	Skip to repeat playing the current message from the beginning. Press twice to skip backward to the previous message.
5	Stop the current message playback
6	Skip to play the next message
8	Stop the current message playback

Note: If your answering machine is switched off, the phone will enter into the remote access mode after 10 rings.

You can then enter the 4-digit remote access PIN (Default Remote Access PIN is 0000) to activate the remote access feature.

When your answering machine memory is full and the answer mode is in ANS & RECORD, the answer mode will change to ANSWER ONLY automatically. It will change to ANS & RECORD mode automatically after some messages have been deleted.

8.5.10 Call Screening

When the answering machine is set to ON and when there is an incoming message, the base will start call screening automatically after the preset numbers of rings of answer delay. At any time if you want to pick up the call, you can press <TALK ON> on the handset and the message recording will be stopped automatically. If the answering machine is in the process of recording, the message already stored will be saved.

9. DEFAULT SETTINGS

Items	Default Values
Ext Ring	Melody 1
Int Ring	Melody 2
Handset Ring Volume	Volume 3
Bs Ringer (Optional)	Melody 1
Base Ring Volume (Optional)	Volume 3
Earpiece Volume	Volume 3
Speaker Volume	Volume 3
Handset Name	Handset
Key Tone	On
Battery Tone	On
Out Of Range	On
Ringer Off	Off
Keypad Locked	Off
Auto Answer	On
Hs Display	Hs Name
Date Format	Dd—Mm--Yy
Time Format	24 Hr
Date	--/--
Time	--:--
Alarm	Off
Menu Language	Country Dependent
Dial Mode	Tone
Flash Time	Medium (Country Dependent)
System Pin	0000
Tam On/Off	On
Answer Mode	Ans & Rec
Tam Language	Country Dependent
Answer Delay	6 Rings
Record Time	120S
Screening	On
Remote Access	On
Compression	Mid
Remote Access Pin	0000

10. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

Problem	Causes	Solutions
<p>No dialing tone when pressing <TALK ON> key.</p>	<ul style="list-style-type: none"> a. The connection cord of the base station is not plugged in. b. The adapter cord is not plugged in correctly in the base station. c. The line is busy, as another hand-set is used. d. Wrong connection cord (no Euro AS). 	<ul style="list-style-type: none"> a. Check the connections. Unplug and plug back in the mains. Check that the telephone line cord has been plugged into the base station and the phone socket. b. Check the base station plug and the 220V plug (remove and plug-in). c. Wait until the line is unoccupied. d. Use the original connection cord.
<p>When connect to a PBX, no and/or wrong connection after dialing.</p>	<ul style="list-style-type: none"> a. Dialing prefix is needed. 	<ul style="list-style-type: none"> a. Insert the dialing prefix.
<p>“SEARCHING” is displayed.</p>	<ul style="list-style-type: none"> a. Base station out of range. b. Base station not connected to mains. 	<ul style="list-style-type: none"> a. Reduce the range. b. Connect base station to mains.
<p>The call does not work.</p>	<ul style="list-style-type: none"> a. Service not activated or wrong operator or wrong setting 	<ul style="list-style-type: none"> a. Check your Subscription with network or change the dial mode.

Problem	Causes	Solutions
No display.	a. Empty battery.	a. Recharge battery.
Answering Machine		
The unit does not record new messages.	a. The answering machine is turned off.	a. Turn on the answering machine.
The caller cannot leave a message.	a. The answering machine is turned off. b. Message memory is full.	a. Turn on the answering machine. b. Erase unnecessary messages.
I cannot operate the answering machine remotely.	a. You are entering the wrong remote access code. b. You are pressing the dial keys too quickly. c. The answering machine is turned off. d. You are using a pulse telephone.	a. If you forget the remote access code, reset to the default settings. b. Press each key firmly. c. Turn on the answering machine. d. Try again using a touch tone phone.
While recording an outgoing message or listening to messages, the unit rings and recording stops.	a. A call is being received.	a. Answer the incoming call and try again to record your outgoing message later.

Please contact the technical support of the network provider for further information.

This telephone is not equipped with a grounding function!

Therefore some of the functions may be limited when used in PBX systems.

11. GUARANTEE

This product is guaranteed for a period of 12 months from the date of purchase shown on your sales receipt.

Keep your sales receipt as it will be required for repairs under guarantee.

The guarantee covers bad workmanship and faulty components. The guarantee does not cover damage caused by misuse or negligence or by excessive voltage for example: faults on the telephone line, power line or lightning damage.

Contact the local distributor.

12. CONFORMITY

This unit conforms to the following rules and regulations:

1995/5/EC Radio frequency and telecommunication equipment and the mutual acceptance of conformity.

The CE mark proves the above.

CE





AEG

perfekt in form und funktion

91-004834-010-100