



USER GUIDE

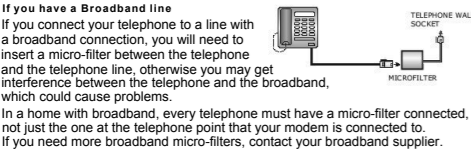
Fusion 2805 Digital Cordless Telephone

THIS EQUIPMENT IS NOT DESIGNED FOR MAKING EMERGENCY TELEPHONE CALLS WHEN THE POWER FAILS. ALTERNATIVE ARRANGEMENTS SHOULD BE MADE FOR ACCESS TO DIAL EMERGENCY SERVICES.

Before operating this set, please read these instructions carefully.

2 INSTALLING YOUR PHONE

- 2.1 Connecting the base station
1) Plug the power supply and line cord into the base station.
2) Plug the power adapter into a 230Vac, 50Hz mains socket...
3) Always use the cables provided in the box.
Warning: Use only the provided adaptor, using other power supplies may cause a hazard.
2.2 Installing and charging the batteries
1) Place the supplied battery pack into the battery compartment...
2) Position the battery compartment cover over the batteries and slide up to click into place.
3) Put the handset on the base and charge for 15 hours before using the handset for the first time.



4 USING YOUR PHONE

- 4.1 Make a Call
4.1.1 Preparatory Dialling
4.1.2 Direct Dialling
4.1.3 Call from the phonebook
4.1.4 Call from the Call List
4.1.5 Call from the redial list
4.1.6 Call timer
4.2 Answer a Call
4.3 End a Call

TECHNICAL DETAILS

Standard Digital Enhanced Cordless Telecommunication (DECT)
Frequency range 1.88 to 1.9 GHz (bandwidth = 20 MHz)
Channel bandwidth 1.728 MHz
Operating range Up to 300m outdoors, Up to 50m indoors
Operating time Standby: 100 hours, Talking: 10 hours
Battery charge time: 15 hours
Temperature range Operating 0°C to 40°C, Storage -20°C to 60°C
Electrical power Base unit: Ten Pao - S004LB060030 / S004LV0600030 input 100-240VAC 50/60Hz 150mA, output 6VDC 300mA

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
Port specification
The port (connected to the mains power supply) is a SELV port with respect to EN41003.
The port (connected to the telephone line) is a TNV port with respect to EN41003.
CLEANING AND CARE
Do not clean any part of your phone system with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the Guarantee.

3 GETTING TO KNOW YOUR PHONE

 


- OR Put the handset on the base station or charger to end the call.
4.4 Handset Speakerphone
4.5 Adjust Volume
4.6 Mute a Call
4.7 Turn off the Handset Ringer
4.8 Turn on the Keypad Lock
4.9 Redial the last number
4.9.1 Redial a Number from the Redial List
4.9.2 Press <UP/DOWN> to browse the redial list.
4.9.3 Press <TALK> to dial to the selected redial number.

TABLE OF CONTENTS

1 IMPORTANT SAFETY INSTRUCTIONS...3
2 INSTALLING YOUR PHONE...5
2.1 CONNECTING THE BASE STATION...5
2.2 INSTALLING AND CHARGING THE BATTERIES...5
3 GETTING TO KNOW YOUR PHONE...6
3.1 HANDBOOK OVERVIEW...6
3.2 DISPLAY ICONS AND SYMBOLS...7
3.3 MENU STRUCTURE...8
3.4 TEXT AND DIGIT ENTRY TABLE...8
4 USING YOUR PHONE...11
4.1 MAKE A CALL...11
4.2 ANSWER A CALL...11
4.3 END A CALL...11
4.4 HANDBOOK SPEAKERPHONE...12
4.5 ADJUST EARPIECE VOLUME...12
4.6 MUTE A CALL...12
4.7 TURN OFF HANDBOOK RINGER...12
4.8 TURN ON THE KEYPAD LOCK...12
4.9 REDIAL THE LAST NUMBER...12
4.10 FIND THE HANDBOOK...13
4.11 MAKE AN INTERNAL CALL (FOR MULTI-HANDBOOK VERSIONS ONLY)...13
5 PRIVATE PHONEBOOK...15
5.1 ADD A NEW PHONEBOOK ENTRY...15
5.2 SEARCH A PHONEBOOK ENTRY...15
5.3 VIEW A PHONEBOOK ENTRY...15
5.4 EDIT A PHONEBOOK ENTRY...16
5.5 DELETE A PHONEBOOK ENTRY...16
5.6 DELETE ALL PHONEBOOK ENTRIES...16
5.7 CHECK THE PHONEBOOK USAGE...16
6 CALLER DISPLAY (NETWORK DEPENDENT)...16
6.1 VIEW THE CALL LIST...17
6.2 STORE A CALL LIST NUMBER INTO THE PHONEBOOK...17
6.3 DELETE AN ENTRY IN THE CALL LIST...17
6.4 DELETE ALL CALL LIST ENTRIES...17

3.2 Display Icons and Symbols



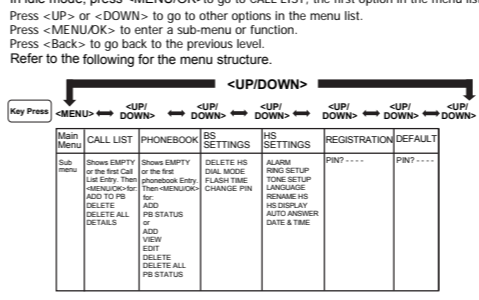
- Steady when the handset is in range of the base. Flashes when out of range of the base or not registered to the base.
Steady when an intercom call is in progress.
Flashes when there is an incoming internal call.
Indicates a call is in progress on that handset.
Indicates that Speakerphone is being used.
Indicates that the handset ringer is switched off.
Steady when an alarm is set. Flashes when the alarm is sounding.
Indicates that the keypad is locked.
Indicates when you have a new Voice Mail message.
This is a Caller Display service and is not usually available from UK network providers.)
Indicates when the battery is fully charged.
Whole icon flashes when the battery is charging.
Internal black icon flashes when the battery is in final charging stage.
Indicates when the battery needs charging.
Flashes when low battery power level is detected.
Indicates when there are more characters or numbers in front of those being displayed.
Indicates when there are more characters or numbers after those being displayed.
LEFT SOFT KEY function. Press to access the main menu.
LEFT SOFT KEY function. Press to confirm the current selection.
Indicates new call in call list.
Indicates more options available in lists, above or below.
RIGHT SOFT KEY function. Press to start an intercom call.
RIGHT SOFT KEY function. Press to go back to the previous menu level or cancel the current action.
RIGHT SOFT KEY function. Press to clear a character, stop the alarm, or mute/unmute the microphone during a call.

- 4.9.2 Store a Redial Number into the Phonebook
1. Follow Steps 1 and 2 in section 4.9.1.
2. Press <MENU/OK> and <UP/DOWN> to select ADD TO PB.
3. Press <MENU/OK> and then enter the name you want to use in the phonebook.
4. Press <MENU/OK> and then modify the number, if necessary.
5. Press <MENU/OK> to show <MEMO 1>.
6. Press <UP/DOWN> to browse the ringtone list. The respective ringtone will be played when browsing the ringtone list.
4.9.3 Delete a Redial Number
1. Follow Steps 1 and 2 in section 4.9.1.
2. Press <MENU/OK> and <UP/DOWN> to select DELETE.
3. Press <MENU/OK> to confirm, and the entry will be deleted.
4.9.4 Delete all Redial List entries
1. Follow Steps 1 and 2 in section 4.9.1.
2. Press <MENU/OK> and <UP/DOWN> to select DELETE ALL.
3. Press <MENU/OK> to display <CONFIRM?>.
4. Press <MENU/OK> to confirm. All entries will be deleted and the display will show <EMPTY>.
4.10 Find the Handset
You can locate the handset by pressing the Page button on the front of the base station.
4.11 Make an Internal Call (Multi - handset versions only)
This feature is only applicable when there are at least two registered handsets.
4.11.1 Intercom Another Handset
4.11.2 Call All Handsets
4.11.3 Transfer an External Call to another handset
4.11.4 Make a 3-way Conference Call

7 PHONE SETTINGS

7.1 DATE AND TIME SETTINGS...18
7.2 ALARM SETTINGS...19
7.3 HANDBOOK SETTINGS...19
7.4 BASE SETTINGS...21
7.5 REGISTRATION...23
7.6 RESET YOUR PHONE...23
8 TROUBLESHOOTING...24
9 DECLARATION OF CONFORMITY...25
10 GUARANTEE AND SERVICE...26

3.3 Menu Structure



3.4 Text and Digit Entry Table

The following table shows you where each letter and punctuation character can be found, by using repeated presses of the alphanumeric keypad. This will be helpful when storing a name in the phonebook and renaming your handset. In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

- Writing Tips:
1. Once a character is selected, the cursor will move to the next position after a short pause.
2. You can move the cursor within the text with the <UP/DOWN> keys to amend the text entry.
3. Press <C> to delete the last character.
4. Press and hold <C> to delete the entire text string.

- 4.11.1 Intercom Another Handset
4.11.2 Call All Handsets
4.11.3 Transfer an External Call to another handset
4.11.4 Make a 3-way Conference Call

1 IMPORTANT SAFETY INSTRUCTIONS

- When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:
1) Read and understand all the instructions.
2) Follow all warnings and instructions marked on the product.
3) Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4) Keep your phone away from hot, humid conditions or strong sunlight, and don't let it get wet or use this product near water.
5) Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
6) Unplug this product from the wall outlet and refer servicing to our Repair Centre under the following conditions:
7) NEVER use your phone outdoors during a thunderstorm-unplug the base from the telephone line and the mains socket when there are storms in your area.
8) Do not use the telephone to report a gas leak in the vicinity of the leak.
9) Use only the supplied NiMH (Nickel Metal Hydride) batteries!
10) The use of other battery types or non-rechargeable batteries/primary cells can be dangerous.
11) Do not use third party charging bays.
12) Please ensure the battery connector is inserted correctly.
13) Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

3.4.1 English Character Set

Table showing English character set mapping for alphanumeric editing and number editing.

3.4.2 Polish Character Set

Table showing Polish character set mapping for alphanumeric editing and number editing.

3.4.3 Norwegian Character Set

Table showing Norwegian character set mapping for alphanumeric editing and number editing.

5 PRIVATE PHONEBOOK

- Each handset can store up to 50 private phonebook entries with names and numbers.
5.1 Add a New Phonebook Entry
5.2 Search for a Phonebook Entry
5.3 View a Phonebook Entry
5.4 Edit a Phonebook Entry
5.5 Delete a Phonebook Entry
5.6 Delete all Phonebook entries
5.7 Check the Phonebook Usage

Package contents

- The package contains the following items:
• 1 Handset
• 1 Base station
• 1 Mains power adapter
• 1 Telephone line cord
• 1 Rechargeable battery pack
• 1 User manual
Note: If you have a Twin, Triple or Quad system, you will also have the requisite extra handset(s) and battery packs, and a charger pod for each extra handset.
Exchange and conditions for use:
You can connect your phone to a direct exchange line (DEL) on a local exchange with its own phone number; to an extension socket connected to a DEL; or to an extension on an approved compatible PBX.
The ring equivalence numbers (REN) of all equipment (phones, fax machines, modems, etc.) connected to an exchange line must not add up to more than 4, otherwise one or more of them may not ring and/or answer calls correctly.
To use your handset and base together, you must be able to establish a radio link between them.
The signal between the handset and the base is in accordance with the normal standards for a DECT phone: Maximum range up to 300 metres outdoors or 50 metres indoors.
The signal range may decrease if there is any large metal object between the handset and the base, such as a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete.
12) Please ensure the battery connector is inserted correctly.
13) Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

If the call is from someone who withheld their number, e.g. by dialling 141, **"WITHHELD"** will display.

If the call is from someone whose number is unavailable, e.g. an international call or from a private exchange, **"OUT OF AREA"** will display.

If you've got new Caller Display records, the handset will display "X NEW CALLS" in standby mode. The New Calls indication will remain until all the new call records have been viewed on that handset.

6.1 View the Call List

All received calls are saved in the Call List with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a <-> icon at the centre of the bottom line of the display.

1. Press <UP/CALLS> to access the call list.
- OR Press <MENU/OK> and <UP/DOWN> to show CALL LIST, the press OK.
2. Press <UP/DOWN> to select the desired entry.
3. Press <-> to view the caller's number if applicable.
4. Press <MENU/OK>, <UP/DOWN> to show DETAILS, and then <MENU/OK> to display the date and time of the call. Press <MENU/OK> to go back to the previous screen.

6.2 Store a Call List Number into the Phonebook

1. Follow Steps 1 and 2 in Section 6.1.
2. Press <MENU/OK> and <UP/DOWN> to show **ADD TO PB**.
3. Press <MENU/OK> and then enter the name.
4. Press <MENU/OK> and the selected call list number is displayed.
5. Edit the number if necessary.
6. Press <MENU/OK> and <UP/DOWN> to select the ringtone.
7. Press <MENU/OK> to store the phonebook entry and return to the calls list.

6.3 Delete an entry in the Call List

1. Follow Steps 1 and 2 in Section 6.1.
2. Press <MENU/OK> and <UP/DOWN> to select DELETE.
3. Press <MENU/OK> to confirm.

6.4 Delete all Call list entries

1. Follow Steps 1 and 2 in Section 6.1
2. Press <MENU/OK> and <UP/DOWN> to select DELETE ALL.
3. Press <MENU/OK> to display <<CONFIRM?>.
4. Press <MENU/OK> to confirm. All entries will be deleted and the display will show <EMPTY>.

17

7.5 Registration

IMPORTANT: When you purchase your Fusion2805 phone system, all handsets are already registered to your base, so you do not need to register them. Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.

You can register additional handsets to have up to five handsets per base unit, with each handset's number (1 to 5) shown on its display. (Note: each handset can only be registered to one base.)

To register a new handset to your base:

1. Press and hold <PAGE> on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed within this time.
2. Press <MENU/OK> and <UP/DOWN> to select **REGISTRATION**.
3. Press <MENU/OK> to display PIN?-----.
4. Enter the 4-digit system PIN(default0000).
5. Press <MENU/OK> to confirm, and the display will show SEARCHING.

If the handset registration is successful, you will hear a confirmation tone and the <antenna icon> will stop flashing.

The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the <antenna icon> will still flash.

7.6 Reset Your Phone

You can reset your phone to the default settings. After a reset, all your personal settings, call list entries, and redial list entries will be deleted but your phonebook remains unchanged.

1. Press <MENU/OK> and <UP/DOWN> to select **DEFAULT**.
2. Press <MENU/OK> to display PIN?-----.
3. Enter the 4-digit system PIN(default 0000).
4. Press <MENU/OK> to display CONFIRM?
5. Press <MENU/OK> to confirm, and the phone will be reset to its default settings.

23

7 PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.

7.1 Date and Time Settings

If you subscribe to Caller Display the time and date settings will be automatically updated by the network when you receive an incoming call.□□□□

The Caller Display service only sends the month and date, not the year, so you may need to set the year.

7.1.1 Change the Date Format

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **DATE & TIME**.
3. Press <MENU/OK> and <UP/DOWN> to select **DATE FORMAT**.
4. Press <MENU/OK> and <UP/DOWN> to select your desired date format (**DD-MM-YY** or **MM-DD-YY**).
5. Press <MENU/OK> to confirm.

7.1.2 Change the Time Format

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **DATE & TIME**.
3. Press <MENU/OK> and <UP/DOWN> to select **TIME FORMAT**.
4. Press <MENU/OK> and <UP/DOWN> to select your desired time format (**12 HR** or **24 HR**).
5. Press <MENU/OK> to confirm.

7.1.3 Set the Time

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **DATE & TIME**.
3. Press <MENU/OK> and <UP/DOWN> to select **SET TIME**.
4. Press <MENU/OK> and then enter the time information in 24 hour format.
5. Press <MENU/OK> to confirm.

Note: If time has been set before, the current time will display, otherwise, **"HH:MM"** will display.

7.1.4 Set the Date

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
 2. Press <MENU/OK> and <UP/DOWN> to select **DATE & TIME**.
 3. Press <MENU/OK> and <UP/DOWN> to select **SET DATE**.
 4. Press <MENU/OK> and then enter the date information in the format you set in Section 7.1.1.
 5. Press <MENU/OK> to confirm.
- Note: If date has been set before, the current date will display, otherwise, **"DD-MM-YY"** will display.

8 TROUBLESHOOTING

Problem	Causes	Solutions
No dialling tone when pressing <TALK ON> key	a. The connection cord of the base station is not plugged in. b. The adapter cord is not plugged in correctly in the base station. c. Another handset is using the base to make a call. d. Wrong telephone line cord	a. Check the connections. Unplug and plug back in the mains. Check that the telephone cord has been plugged into the base station and the phone socket. b. Check the base station plug and the 230V plug (remove and plug-in). c. Wait until the line is unoccupied. d. Use the original telephone line cord supplied
When connect to a PBX, no and/or wrong connection after dialling	Dialling prefix is needed.	Insert the dialling prefix
"SEARCHING" is displayed	a. Base station out of range. b. Base station not connected to mains.	Reduce the range. Connect base station to mains.
The call does not work.	Service not activated or wrong setting	Check your Subscription with network or change the dial mode.
No display.	Empty battery	Recharge battery

Please contact the technical support of the network provider for further information. This telephone is not equipped with a grounding function, and therefore some of the functions may be limited when used in PBX systems.

Technical Support

If the fault persists...

Disconnect all other instruments connected to the same line as the phone system and try to make a call.

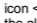
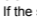
Disconnect the baseunit from the telephone line and plug a different phone into the master telephone socket.

Try making a call. If this works, the line is OK.

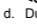
If the call does not work, and you are using a **two-way socket adapter**, remove it and plug a telephone directly into the socket. If the call now works, the adapter may be faulty.

24

7.2 Alarm Settings

You can set an alarm time on this phone. When an alarm is set, the alarm icon  is shown on the handset display. When the alarm time is reached, the alarm icon  and **"ALARM ON"** flash on the handset display, and the alarm tone rings for 45 seconds. You can press any key to disable the alarm if the snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold <OFF> while the alarm is sounding, to stop the alarm and turn off the snooze function.

Note:

- a. A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.
- b. The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 4** level.
- c. During an external call or internal call, if an alarm is set and when the alarm time is reached, the  and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds <OFF> to disable the alarm, the display will revert to the call duration.
- d. During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period.

7.2.1 Turn on/off the Alarm

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **ALARM**.
3. Press <MENU/OK> and <UP/DOWN> to select **ON/OFF**.
4. Press <MENU/OK> to confirm.

Note: If ON is selected, you will be asked to set the alarm time.

7.2.2 Set the Alarm Time (If Alarm time is set to be ON)

1. Follow Steps 1 to 4 in Section 7.2.1.
2. Enter the alarm time in 24 hour format.
3. Press <MENU/OK> to display "SNOOZE".
4. Press <MENU/OK> and <UP/DOWN> to select snooze **ON** or **OFF**.
5. Press <MENU/OK> to confirm.

7.3 Handset Settings

7.3.1 Set the Ringer Melody for Internal Calls

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **RING SETUP**
3. Press <MENU/OK> and <UP/DOWN> to select **INT RING**.
4. Press <MENU/OK> and <UP/DOWN> to select the melody you want to hear for internal calls.

Note: The respective melody will be played while browsing the ringtone list.

5. Press <MENU/OK> to confirm.

19

7.3.2 Set the Ringer Melody for External Calls

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **RING SETUP**.
3. Press <MENU/OK> and <UP/DOWN> to select **EXT RING**.
4. Press <MENU/OK> and <UP/DOWN> to select melody you want to hear for external calls.

Note: The respective melody will be played while browsing the ringtone list.

5. Press <MENU/OK> to confirm.

7.3.3 Set the Ringer Volume

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **RING SETUP**.
3. Press <MENU/OK> and <UP/DOWN> to select **RING VOLUME**.
4. Press <MENU/OK> and <UP/DOWN> to select the desired ringer volume (a total of 6 ringer volume levels including **VOLUME OFF**).

Note: The respective ringer volume will be played during your selection.

If **VOLUME OFF** is selected, the <Ringer Off> icon will be displayed.

Note: Press <MENU/OK> to confirm.

7.3.4 Set Alert Tones

Three different alert tones are set on by default, but can be turned off, if desired. Key Tone - a single beep is emitted when you press a key. Low Battery Tone - emitted while you are talking on the phone to alert you that you need to charge the handset batteries.

Out of Range Tone - emitted while you are talking on the phone to alert you to move closer to the base unit, before the call is lost.

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **TONE SETUP**.
3. Press <MENU/OK> and <UP/DOWN> to select **KEY TONE / BATTERY TONE/OUT OF RANGE**.
4. Press <MENU/OK> and <UP/DOWN> to turn on or off these tones.
5. Press <MENU/OK> to confirm.

7.3.5 Set the Handset Language

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **LANGUAGE**.
3. Press <MENU/OK> and <UP/DOWN> to select the desired language.
4. Press <MENU/OK> to confirm.

7.3.6 Rename the Handset

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **RENAME HS**.
3. Press <MENU/OK> and change the name of your handset, using <C/MUTE> to delete letters and the alphanumeric keys to enter up to 10 letters for the name.
4. Press <MENU/OK> to confirm.

20

7.3.7 Choose the Information to be Displayed in Idle

You should normally leave the dialling mode at its default setting of TONE (also called DTMF) unless the phone is connected to an old exchange that only recognises **PULSE** dialling.

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **HS DISPLAY**.
3. Press <MENU/OK> and <UP/DOWN> to select **HANDSET NAME or TIME**.
4. Press <MENU/OK> to confirm.

7.3.8 Set the Auto Answer

If you turn on the Auto Answer, you can answer a call automatically by just lifting the handset off the base or charger, without having to press any key.

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **AUTO ANSWER**.
3. Press <MENU/OK> and <UP/DOWN> to turn on or off the auto answer feature.
4. Press <MENU/OK> to confirm.

7.4 Base Settings

7.4.1 De-register a Handset

This operation should only be necessary if one of your handsets becomes faulty or lost and needs to be replaced. You will need to enter the 4-digit System PIN (Default PIN is 0000) in order to de-register a handset from the base station. A de-registered handset will have the antenna icon flashing and "REGISTER" on the display.

Note: You cannot de-register the handset that you are currently using.

1. Press <MENU/OK> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **DELETE HS**.
3. Press <MENU/OK> and the display shows "PIN? -----".
4. Enter the 4-digit system PIN(default 0000).
5. Press <MENU/OK> and the first handset number is displayed.
6. Press <UP/DOWN> to scroll through the list of registered handsets and select the number of the handset you want to de-register.
7. Press <MENU/OK> to confirm, and the chosen handset will be de-registered.

7.4.2 Set the Handset Language

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **LANGUAGE**.
3. Press <MENU/OK> and <UP/DOWN> to select the desired language.
4. Press <MENU/OK> to confirm.

7.4.3 Rename the Handset

1. Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **RENAME HS**.
3. Press <MENU/OK> and change the name of your handset, using <C/MUTE> to delete letters and the alphanumeric keys to enter up to 10 letters for the name.
4. Press <MENU/OK> to confirm.

21

7.4.2 Change the dial mode

You should normally leave the dialling mode at its default setting of TONE (also called DTMF) unless the phone is connected to an old exchange that only recognises **PULSE** dialling.

Note: If PULSE dialling is set, you can press the * key to switch to TONE dialling for the rest of that call.

1. Press <MENU/OK> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **DIAL MODE**.
3. Press <MENU/OK> and <UP/DOWN> to select **TONE** or **PULSE** (The current setting is indicated by an asterisk to the right).
4. Press <MENU/OK> to confirm.

7.4.3 Change the Flash (Recall) Time

You may need to change the recall (flash) time if your phone is connected to a PBX. The recall time options are **SHORT** (the default value of 100ms), **MEDIUM** (300ms) or **LONG** (600ms).

1. Press <MENU/OK> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **FLASH TIME**.
3. Press <MENU/OK> and <UP/DOWN> to select your desired flash time (**SHORT**, **MEDIUM**, **LONG**, with the current setting indicated by an asterisk to the right).
4. Press <MENU/OK> to confirm.

7.4.4 Change the System PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorised use. The default system PIN code is 0000.

1. Press <MENU/OK> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <MENU/OK> and <UP/DOWN> to select **CHANGE PIN**.
3. Press <MENU/OK> and the display shows PIN?-----.
4. Enter the old system PIN.
5. Press <MENU/OK> to display NEW PIN?-----, and enter your new 4-digit system PIN.
6. Press <MENU/OK> to display CONFIRM?-----, and enter your new 4-digit system PIN again.
- Note: If the new PIN entered in Step 6 is not the same as the new system PIN again, entered in Step 5, you must enter the new system PIN at step 5 again.
7. Press <MENU/OK> to confirm

22

10 PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of 1 Year.

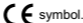
This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

9 DECLARATION OF CONFORMITY

The Fusion 2805 model complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to *Radio Spectrum Matters*, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to *electromagnetic compatibility (EMC)* and the European Community Directive 2006/95/EC relating to *Electrical Safety*.

Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standards:

Radio Spectrum: ETSI EN 301406 : V 2.1.1 (2009-07)
EMC: ETSI EN 301489-6: V1.3.1 (2008-08)
ETSI EN 301489-1: V1.8.1 (2008-04)
Safety: EN60950 -1 : 2006 + A1: 2009

The conformity to the requirements is validated by the  symbol.

NOTE: In compliance with Directive 2002/96/EC, when you purchase a product that comes with the symbol shown on the right, you are required to dispose of electrical and electronic equipment by separate waste collection and you cannot dispose of the product as normal waste.

This equipment and all its components, subsystems and consumable materials formed an integral part of this product and when you decide to dispose of them you have to takethem to a local recycling centre for appropriate waste disposal, in compliance with the current regulations. Details about the location of these centres can be obtained from your local authority.



Notes for battery disposal

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

Please be aware of the local rules on separate collection of batteries. The correct disposal of batteries helps protect the environment and prevent health hazards.

25

26