



Model: Torino
Corded analogue telephone

INSTRUCTION MANUAL

Before operating this Telephone instrument please read these instructions carefully.

INTRODUCTION

Thank you for purchasing our product which adopts excellent workmanship and exceptional reliability.

Your telephone is designed to give you flexibility in use and high quality performance. To get the most from your new telephone, we suggest that you take a few minutes to read through this instruction manual to familiarize yourself with all the features of the product.

The product is guaranteed for 12 months from the date of purchase shown on your sales receipt. The guarantee does not cover damage caused by misuse or negligence or by excessive voltage. For example, faults on the telephone line or lightning.

SAFETY INSTRUCTIONS

When using your telephone instrument, the following basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons:


1. Read, understand and follow all warnings and instructions
2. Unplug the product from the wall outlet before cleaning. Do not use liquid cleaning materials nor aerosols. Use a soft damp cloth for cleaning.
3. Do not place this product on unstable surfaces. The product may drop, causing serious damage to the product.
4. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
5. Never push foreign objects of any kind into this product through cabinet slots as they may affect dangerous voltage points or short circuit parts that could result in fire or electric shock. Never spill any liquids on the product.
6. Avoid moving or disconnecting this unit during a heavy storm, as there may be a risk of electric shock from lightning. Avoid conversations during an electric storm.
7. Do not disassemble this product. If service or repair work is required, contact your qualified technician. This will void the warranty, please send to service center for any defects.
8. Do not use the product in the vicinity of a gas leak.

FEATURES

- FSK/DTMF compatible with auto-detection.
- 12-digit LCD with clock display
- 66 incoming and 20 outgoing number memories
- 2 one-touch and 10 two-touch memories
- 16 selectable ring tones
- Music on hold
- Mute function
- Do Not Disturb function

- Transfer function between parallel phones(using 2 similar models)
- Secret code function in Do Not Disturb state to avoid missing important calls
- Pre-dial and edit function
- Redial function
- 2-step lock function
- LCD contrast adjustable
- Selectable flash time (100/300/600/1000ms)
- Alarm clock
- Pulse/Tone dialing mode compatible
- Handsfree speaker volume adjustable
- Ringer volume adjustable
- LCD backlight display
- In use LED indicator
- Message waiting LED indicator
- Hands-free speakerphone

LOCATION DESCRIPTION

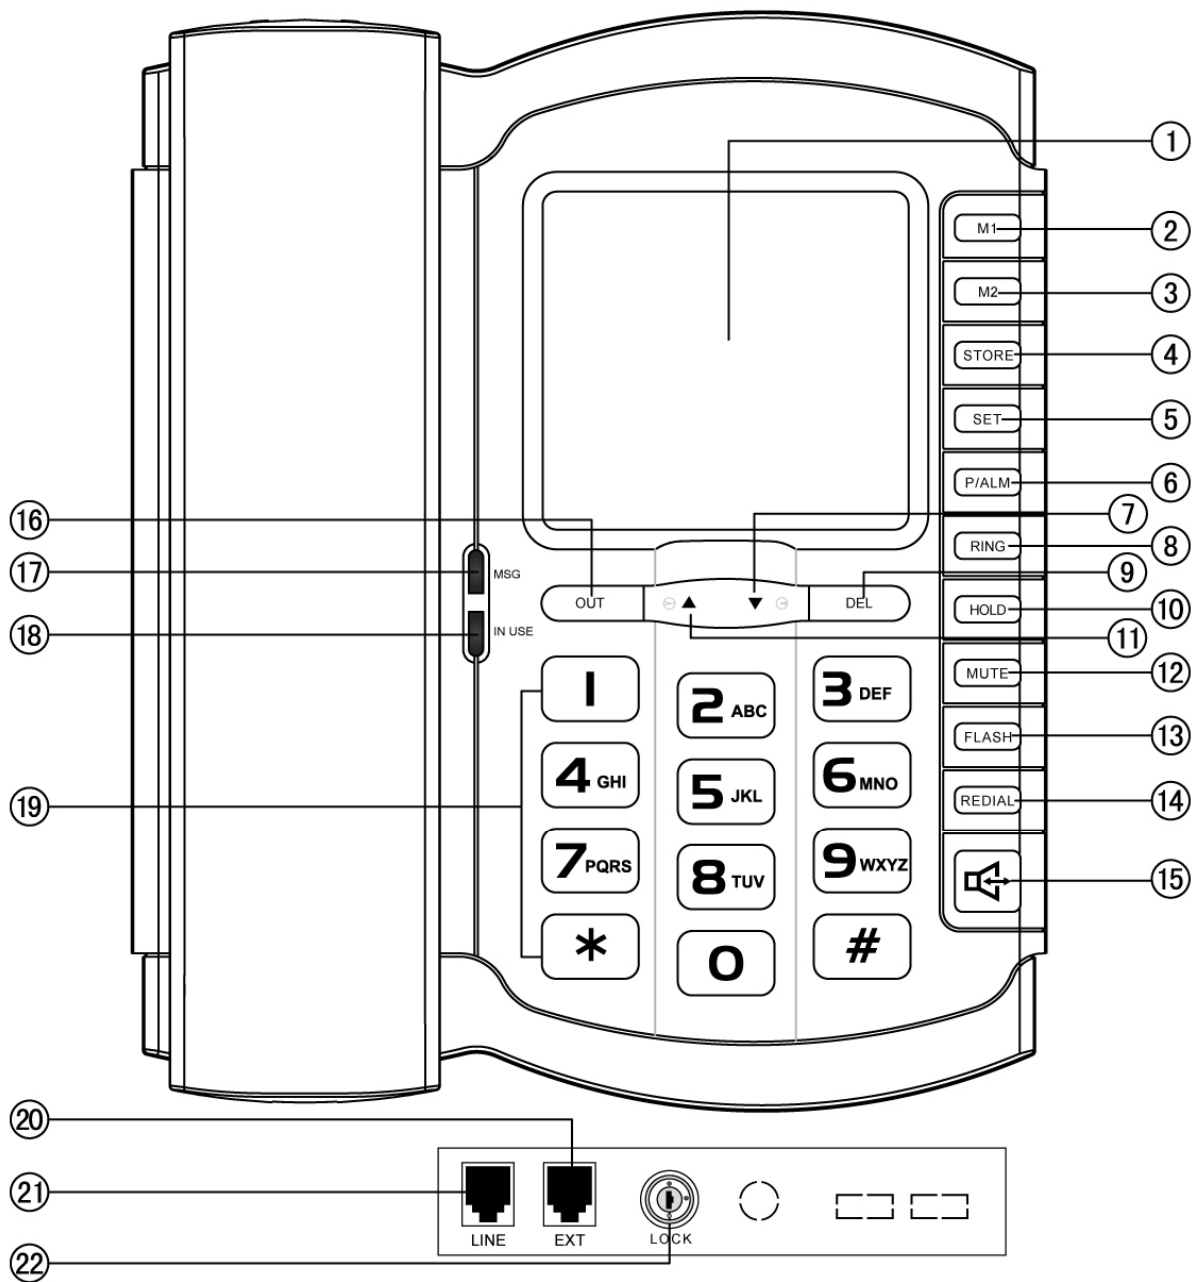

- | | | | |
|---------|--------|--------------|-----------------|
| ① LCD | ⑦ DOWN | ⑬ FLASH | ⑲ NUMERICAL KEY |
| ② M1 | ⑧ RING | ⑭ REDIAL | ⑳ EXT |
| ③ M2 | ⑨ DEL | ⑮ H.F | ㉑ LINE |
| ④ STORE | ⑩ HOLD | ⑯ OUT | ㉒ LOCK |
| ⑤ SET | ⑪ UP | ⑰ MSG LED | |
| ⑥ P/ALM | ⑫ MUTE | ⑱ IN USE LED | |

GETTING STARTED

1. The unit requires 3×1.5V AA batteries. Open the battery compartment cover and insert the batteries, observe the polarity, then close the cover (Proposal use alkaline batteries). The time should be displayed on the liquid crystal screen after the batteries are inserted.
2. Insert one end of the line cord into the connector marked “line” at the base of the telephone, insert the other end into the wall outlet.
3. Connect the one end of the curly cord to the handset and the other end to the base of the telephone.
4. Set the dialing mode to PULSE or TONE depending on the service providers requirements.
5. Apply for caller identification from your service provider.

RECEIVING A CALL

1. On receipt of an incoming call, the telephone rings, and the LCD displays the callers number, the date, time, incoming number and the **NEW** icon.
2. If the same number is received again, and the previous call has not been reviewed, the LCD displays **REP** icon.



When the incoming memory is full, the latest incoming number replaces the oldest number in the memory.

NOTE: For the phone to display incoming numbers and other information, you must have an active Caller ID subscription with your service provider.



➤ From the handset

1. Pick up the handset and talk to the other party.
2. To end the call, return the handset to the base.

➤ Switching to speakerphone

1. When using the handset, press  key and return the handset to the base.
2. To end the call, press  key again.

➤ From the speakerphone



1. When the telephone rings, press  key and talk to the caller. For the other party to hear your voice clearly, speak from a distance of not more than 32cm from the telephone.
2. To end the call, press  key again.

MAKING A CALL


➤ From the handset

1. Pick up the handset.
2. When you hear dial tone, dial the desired number.
3. The telephone will start to time the conversation after 6 seconds.
4. To end the call, return the handset to the base.


➤ From the Speakerphone

1. Press  key
2. When you hear the dial tone, dial the desired number.
3. The telephone will start to time the conversation after 6 seconds.
4. To end the call, press  key again.

➤ Pre-dialing function

1. When the handset is on the base, dial the desired number.
2. If a mistake is made, use the **DEL** key to edit the number.
3. Press  key or pick up the handset and the number will be dialed automatically.

➤ Redial

1. Pick up the handset or press  key,
2. Press the **REDIAL** key, the last dialed number will be dialed again

REVIEWING, CALLING BACK AND DELETING INCOMING NUMBERS


➤ Reviewing

In on-hook state, press **▲** or **▼** key to scroll through and review the numbers.

➤ Deleting

In on-hook state, when the desired number is displayed on the LCD, press the **DEL** key, the number is deleted. Or press and hold the **DEL** key for 3 seconds; all the incoming numbers will be deleted.

➤ Calling back

In on-hook state, scroll to the desired number, press  or the **REDIAL** key or pick up the handset, the number is dialed out.


NOTE: If the PABX code is set, the telephone will detect and add the PABX code before the number automatically and then dial back. The PABX code will be dialed first, followed by a 2 second pause and then the telephone number.

REVIEWING, CALLING BACK AND DELETING OUTGOING NUMBERS

➤ Reviewing

In on-hook state, press the **OUT** key, then repeatedly press **OUT** to review the outgoing numbers one by one.

➤ Calling back

1. In on-hook state, press the **OUT** key to review the desired number, then press  or the **REDIAL** key or pick up the handset, and the number is dialed out.

➤ Deleting

1. In on-hook state, press the **OUT** key to scroll to the desired number.
2. Press the **DEL** key and the number is deleted
3. Or press and hold the **DEL** key for 3 seconds, all numbers will be deleted.

SETTING MENU

➤ Setting date & time

1. In on-hook state, press the **SET** key, the LCD displays **SET 1 DATE**. Press the **SET** key again, the year flashes on the LCD display.
2. Press **▲** or **▼** key to edit the year.
3. Press the **SET** key to confirm and enter into the month setting.
4. Repeat the above procedure for month setting.
5. Repeat the above procedure for date and time setting.

➤ Setting Local Area Code

1. In on-hook state, press the **SET** key and press the **▲** key, the LCD displays **SET 2 CODE**, press the **SET** key again, the LCD displays **CODE -----** and the first “-” flashes.
2. Press **▲** or **▼** key to enter the first digit of the area code.
3. Press the **SET** key to confirm and enter the next digit of the area code.
4. Repeat the above procedure to enter the rest of the code.

➤ Setting Long Distance Code

1. In on-hook state, press the **SET** key and press the **▲** key twice, the LCD displays **SET 3 LCODE**, press the **SET** key again, LCD displays **-----0** (or the preset code, press the **DEL** key to delete the code).
2. Enter the long distance code using the numerical keypad. A maximum of 12 digits can be entered.
3. Press the **SET** key to confirm and exit.

➤ Adjusting LCD Contrast

1. In on-hook state, press the **SET** key and press **▲** key three times, the LCD displays **SET 4 LCD**, press the **SET** key again, the LCD displays **LCD 5**.
2. Press **▲** or **▼** key to adjust the LCD contrast, a total of 8 levels can be selected.
3. Press the **SET** key to confirm and exit.

In on-hook state, press the FLASH key to enter LCD contrast setting directly, then press the FLASH key continuously to adjust the LCD contrast.

➤ Setting Flash Time

1. In on-hook state, press the **SET** key and press **▲** key four times, the LCD displays **SET 5 FLASH**, press the **SET** key again, the LCD displays **FLASH 100**.
2. Press **▲** or **▼** key to edit the Flash time (100, 300, 600 and 1000ms)
3. Press the **SET** key to confirm.

Note: If the telephone is left idle for longer than 16 seconds and no key is pressed, the setting mode will return to the on-hook state.


➤ Setting the PABX CODE

1. In on-hook state, press and hold the **DEL** key for 3 seconds to set the PABX code, the LCD

displays **PCODE -** and the “-” flashes.

2. Press ▲ or ▼ key to enter the PABX code from 0 to 9 or -.
3. If no number is entered -, it means no PABX code has been set.
4. Press the **SET** key to confirm and quit.

➤ **Setting Alarm Clock**

1. In on-hook state, press the **P/ALM** key once, the LCD displays **12-00 AL1**.
2. Press ▲ or ▼ key to select ON or OFF. LCD displays  icon when the alarm is set to ON.
3. Press the **SET** key, value “12” starts to flash.
4. Press ▲ or ▼ key to set the alarm hour and press the **SET** key to confirm and enter into the alarm minute setting.
5. Press ▲ or ▼ key to edit the alarm minutes and press the **SET** key to confirm and enter into the next group of alarm clock setting.
6. Repeat the above steps to set additional alarms.


NOTE: The first 3 groups of alarm clock settings will be a repeat alarm and will be active every day while the last 2 groups of alarm clock settings will be once-off alarms.

SECRET CODE SETTING AND REMOTE MONITOR FUNCTION

➤ **Setting**

1. In on-hook state, press and hold the **RING** key for 3 seconds, the LCD displays **Pin ----**.
2. Enter a 4-digit PIN using the numerical keypad.
3. Press **DEL** to correct errors, press **SET** to confirm.
4. When the last digit of the secret code is #, the telephone will activate the remote monitor function.
5. Set the ringing volume to dB0. (Please refer to section “SETTING RINGING TONE AND ADJUST RINGER VOLUME”).

➤ **Using the secret code function**

1. **Secret code:** When the ringer volume is set to dB0 (do not disturb mode), and a call is received the telephone will not ring although the calling party will hear a ringing tone. After 3 to 4 rings the calling party will hear a short beep sound. If the calling party knows your secret code and enters the secret code after hearing the beep sound, the telephone will start to ring. You are now able to answer the call by lifting the handset or by pressing the  key
2. **Remote monitor:** If the last digit of the secret code that was entered is #, after the calling party enters in the correct secret code, the telephone will go into hands free mode automatically. The caller can now monitor the vicinity near the telephone.
3. If the caller keys in the wrong code, he/she will have to call again and key in the correct secret code.


NOTE: This function is useful only when the telephone ringer volume is set to dB0. The calling party must know the secret code in order to enable this feature.

TRANSFER BETWEEN PARALLEL PHONES

➤ Setting the paging number

1. In on-hook state, press and hold the **SET** key, the LCD displays **EL--**
2. Key in “*” and the paging number (example “*1” and “*2”), use the **DEL** key to edit
3. Press the **SET** key to confirm and exit.

➤ Transferring a call to paralleled phones:

Upon an incoming call, use one of the paralleled phones to answer the call. Press “*” and the paging number that was set in the other telephone to where you want to transfer the call, the other telephone rings, pick up its handset or press  key to answer the incoming call.

NOTE: Please use same model telephones for the above feature to work. Any special services starting with “*” offered by your service provider may not function properly. Batteries must be inserted for this feature to function properly.

ANTI-DIALING FROM PARALLEL PHONES FUNCTION

1. In on-hook state, press and hold # key for 3 seconds, LCD displays **SPI OFF**
2. Press # key again, LCD displays **SPI ON**
3. Press the **SET** key to confirm

When the anti-dialing function is set to ON, it will not be possible to establish a call from a parallel telephone plugged into the same line.

SETTING RINGING TONE AND ADJUST RINGING VOLUME

There are 5 normal ringing tones and 11 ring melodies for selection:

1. In on-hook state, press the **RING** key, the LCD displays **ring 02 db3**
2. Press the **RING** key to select the desired ringing tone.
3. Press **▲** or **▼** key to adjust ringing volume.
4. Press **SET** to confirm and exit.

NOTE: The volume ranges from dB0-dB3, with dB3 being the loudest, and dB0 being the “**Do Not Disturb**” mode. If the phone is set to DND mode, the telephone will not ring when there is an incoming call.

DO NOT DISTURB IN REAL TIME

Upon receipt of an incoming call when the telephone rings, press the **DEL** key, to stop the ringing, the NEW LED will flash.


ADJUST HANDSFREE VOLUME

In hands free mode, press **▲** or **▼** key to adjust the hands-free volume. The LCD displays the volume level. There are a total of 4 selectable speakerphone volumes.

SELECTING PULSE OR TONE DIALING MODE

1. In on-hook state, press and hold * key for 3 seconds, the LCD displays **P**, the dialing mode is

set as Pulse.

2. Press * key once again, the LCD displays , the dialing mode is set as Tone. Press the **SET** key to confirm.


MUTE FUNCTION

By pressing the **MUTE** button during a conversation, the other party can not hear your conversation. Press the **MUTE** button again to restore the conversation.

MUSIC ON HOLD

➤ Hold music selection

There are 6 selectable music on hold melodies.

1. In off-hook or hands free state, press the **HOLD** key
 2. Press the **OUT** key to select the desired music on hold. The music is played at same time.
 3. Press **▲** or **▼** key to adjust the volume of the music on hold melody.
- **When talking over handset, press the HOLD key to activate the Music On Hold function. The other party is placed ON HOLD and will hear the melody.**
1. Press the **HOLD** key to release hold mode and to continue the conversation.
 2. Hang up the handset, to enter into hands free hold mode.
- When speaking in hand free mode, press the **HOLD** key to activate the Music On Hold mode the other party is placed on HOLD and will hear the Music On Hold melody.
1. Pick up the handset to continue the conversation, or
 2. Press  key to quit the hold mode and continue the conversation in hands-free mode.


ONE TOUCH MEMORY OPERATION

➤ Store the number in one-touch memory

1. Pre-dial the desired number or review the incoming or outgoing number you wish to store.
2. Press the **STORE** key
3. Press the **M1** or **M2** key

➤ Make a call from the one-touch memory

In off-hook or on-hook state, press the **M1** or **M2** key to dial out the stored number.

Or in on-hook state, press the **STORE** key + **M1** or **M2** key, the LCD displays the stored number, press  or the **REDIAL** key or pick up the handset to dial the number, or press the **REDIAL** key twice to dial the number with the long distance code ahead of the number.


TWO TOUCH MEMORY OPERATION

➤ Store the number in two-touch memory

1. Pre-dial the desired number or review an incoming or outgoing number that you wish to store.
2. Press the **STORE** key
3. Press one of numeric keys (0-9) on the **numeric keypad**. The telephone number is now stored

under the selected number on the **numeric keypad**.

➤ **Make a call from two-touch memory**

In on-hook state, press the **STORE** key + numeric key (0-9) on the **numeric keypad**, the LCD displays the stored number, press  or the **REDIAL** key or pick up the handset to dial the number, or press the **REDIAL** key twice to dial out number ahead with the long distance code.

In off-hook state, press the **STORE** key + numeric key (0-9) key, the stored number will be dialed out.

LOW BATTERY DETECTION

When the battery voltage is lower than 3.9V, the LCD displays a battery icon to remind the user to replace the batteries.

LCD BACKLIGHT FUNCTION

The backlight is turned on upon receipt of an incoming call, dialing, pressing any key or in MUSIC ON HOLD mode. It will fade off if the telephone is left idle for several seconds.

NOTE: If the batteries are not inserted, there will be no LCD backlight function.

FLASH FUNCTION

Press the **FLASH** key followed by the extension number to transfer a call when the telephone is used behind a PABX

PAUSE FUNCTION

The PAUSE function is useful for use behind a PABX. Dial the PABX external line access code (usually 0 or 9) then press the PAUSE button and thereafter dial the desired telephone number.

LOCK

Turn the key to green, all numbers starting with "0" are locked

Turn the key to red, all numbers are allowed to be dialed out.

* Emergency numbers starting with "1" such as 10111,10177 can be dialed on both lock positions.

NOTES

Please unplug the telephone line when installing or replacing the batteries.

TROUBLESHOOTING TIPS

No Dial Tone

* Check hook switch to make sure it pops up

Can't dial out

* Make sure Tone/Pulse is set to correct position according to telephone exchange requirement

* Unplug the phone, wait 30 seconds and plug the phone back in

* Check the phone line cord

* Check that all connectors are firmly inserted in their sockets.

- Phone does not ring
- * Check the phone line cord
 - * Could have too many phones on one line (the total REN of all phones should not be greater than the maximum for your area, usually 5).
 - * Check if the ringing volume is set to dB0
- Last number redial and/or Memory dialling don't work on a PABX
- * When you first make a call try pressing the Pause Button for a pause between the outside line access digit (eg: 9 or 0) and the telephone number, you should later be able to redial the number.
 - * If your PABX requires you to wait for a second dial tone before dialling the telephone number, press the Pause Button for a pause between the access digit and number.
- LCD is dim
- * Check if the batteries need replacing
 - * Check if the contrast is set correctly