

Sela

Making the highest quality phone in the world

Speakerphone with 76 Caller ID Memories, Call Waiting
Caller ID, 80 Phone Book Entries, Data Port, Message
Waiting & Incoming Call Indication



MODEL: SL-4137M

SL-4137MH  (with headset jack)

PLEASE READ OPERATION MANUAL BEFORE USING YOUR
NEW TELEPHONE AND KEEP IT FOR FURTHER REFERENCE.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
PRODUCT FEATURES.....	3
LOCATION AND FUNCTION OF CONTROLS.....	3
INSTALLATION	6
FUNCTION SET UP.....	7
OPERATION.....	8
TROUBLE SHOOTING GUIDE.....	10
WALL MOUNTING.....	11

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons.

 
1. Read and understand all directions.
2. Follow all warnings and instructions.
3. Unplug this product from the wall outlet before cleaning by damp cloth .
4. Do not use this product near water.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Do not allow anything to rest on the telephone cord. Do not locate this product where the cord will be abused by persons walking on it.
7. Never put foreign objects of any kind into the product as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
8. To reduce the risk of electrical shock, do not disassemble this Product, Take it to a qualified service person if service or repair work is required. incorrect opening and reassembly may cause risk.
9. Adjust only the controls that are covered by the operating instructions. Improper adjustment of controls may result in damage that could require extensive work by a qualified technician.
10. Refer servicing to qualified service personnel if the following should occur:
When the phone line or plug is damaged or frayed.
 - If liquid has been spilled into the product.

- If the product has been exposed to rain or water.
 - If the product does not operate normally by following operating instructions.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
11. Avoid using a telephone during an electrical storm. There may be a risk of electrical shock from lighting.
 12. Do not use the telephone in the vicinity of a gas leak.
 13. The handset receiver may retain dangerous materials such as metallic pins and staples because the receiver is magnetic.

PRODUCT FEATURES


- | | |
|---|---|
| 1. Battery free solution | digits for each number |
| 2. Commercial grade high-quality speakerphone | 7. Hold with mute, music and extension release |
| 3. LCD displays phone numbers, date and time | 8. 16 ring melodies selectable |
| 4. 76 caller ID memories for incoming/missed calls | 9. Flash time (100/200/300/400/600/900ms)adjustable |
| 5. 20 VIP memories | 10. Last 16 dialed number review and redial |
| 6. 80 phone book entries,16 characters for each name,20 | 11. Handset Volume 4 levels adjustable |
| | 12. Speaker volume 8 levels adjustable |
| | 13. Ringer volume 8 levels adjustable |

LOCATION AND FUNCTION OF CONTROLS

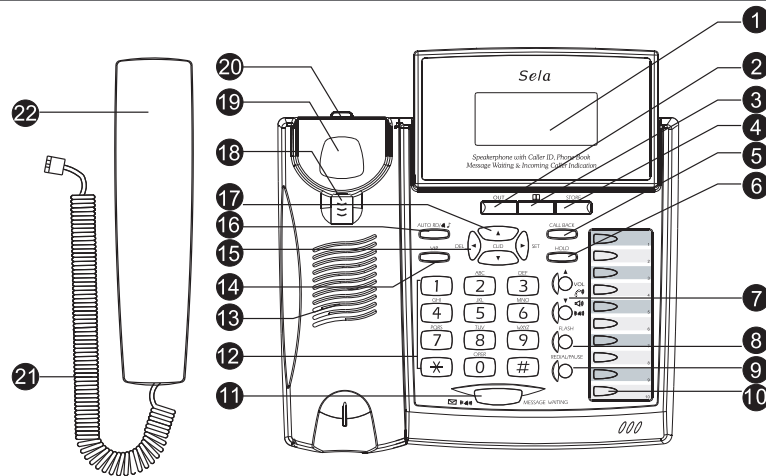


- | | |
|--|---|
| 1 LCD Display..... | Displays the phone number, date time and other information. |
| 2 Out..... | Review last 16 dialed numbers. |
| 3 | Press to enter the phonebook menu. |
| 4 Store..... | Press to store the one-touch speed dial memories. |
| 5 Call Back..... | Press to dial the stored number when reviewing caller IDs or phonebook . |
| 6 Hold..... | Press to hold the line. |
| 7 | a. While using the speakerphone,press the key to adjust the speakerphone volume.
b. While using the handset, press the key to adjust the handset volume.
c. In on-hook status, press and hold for 3 seconds to adjust the ringer volume. |
| 8 Flash..... | To use behind PBX system . |
| 9 Redial/Pause..... | Press to redial and review the last dialed numbers. |
| 10 One-Touch Speed Dial Memories..... | Phone numbers can be stored for speed dialing. |
| 11 Message Waiting/Incoming Call Indication..... | Will flash when the unit has message or Incoming Call |
| 12 Dialing Key (0-9, *, #)..... | Dial phone numbers and extensions. |
| 13 Speaker..... | For Ringer & speakerphone. |
| 14 VIP..... | Press to set or remove the VIP numbers. |
| 15 Del/Set..... | a. Press and Hold for 3 seconds to bring up setup menu. (In on-hook status)
b. Press to delete or edit the telephone number when editing phone book or viewing call IDs.
c. Press to delete or edit the telephone number when reviewing caller IDs. |
| 16 AUTO RD/ (Auto Redial/Change Ring Tone)..... | a. Press to auto redial the last dialed number
b. Press and hold for 3 seconds to change the ring tone(16 melodies). |

 - 17 CLID▲ or ▼.....Review caller IDs, review menu to select telephone function settings.
- 18 Handset Hook Guide.....Turn 180 degrees to hang up the handset when the unit is mounted on the wall.
- 19 Hook On/Off Switch.....Press to end a call.
- 20 Handset Hook.....When the unit is mounted on the wall, this is used to hang up the handset without hanging up the line.
- 21 Handset Coil Cord.....Connect the handset to the base unit.
- 22 Handset.....For speaking & listening.

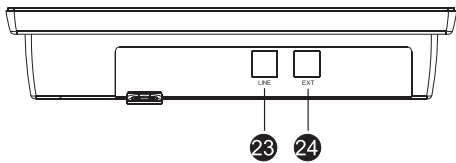


 - 23 Line Cord Jack.....Connect telephone to wall jack.
- 24 DATA PORT(RJ11).....Used to connect the phone to the extension phone or other equipment.
- 25 Headset Jack(2.5mm/RJ10).....To connect headset(for model SL-4137MH only)
- 26 Handset Jack.....To connect handset

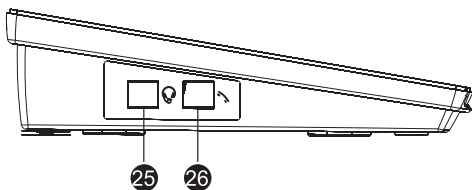

INSTALLATION

 1. Connect one end of handset coil cord into the jack of the handset and connect the other end into the handset jack of the base unit.
2. Plug one end of phone line into the line cord jack of the base unit and connect the other end to the wall jack.
3. The phone is battery free design, LCD doesn't display while on hook status, If user need to see clock all the time ,Just open the cover of battery compartment and load 4pcs "AA" batteries.

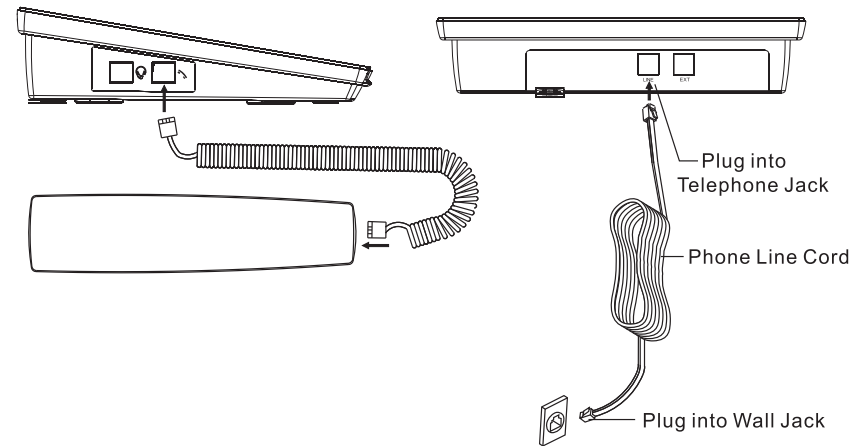

Note:

1. Use only the following type and size batteries: AA cell Um3. The proper polarity or direction must be observed.
2. Please change your batteries every half a year.
3. When replacing batteries, all batteries should be changed at the same time.
4. Please pull out the line cord, when replacing batteries.
5. The design of handset cord will be unable to pull out easily.

FUNCTION SETUP

1. Set the Language

In on-hook status, press and hold **[SET]** for 3 seconds to enter LANGUAGE SETUP. Press **[CLID▼or▲]** to select the language. Press **[SET]** to confirm.

2. Set the Contrast

After set up the LANGUAGE, press **[SET]** to access LCD CONTRAST setup. LCD display SETTING CONTRAST. Press **[CLID▼or▲]** to select the contrast (1-5). Press **[SET]** to confirm.

3. Set Year, Date and Time

After set up the LCD CONTRAST, press **[SET]** to access the YEAR, DATE and TIME setup. The digits of the year will flash. Press **[CLID▼or▲]** to select the year. Press **[SET]** to confirm. Then digits of the month will flash. Press **[CLID▼or▲]** to select the month and press **[SET]** to confirm. Use the same method to set up the date and time.

4. Set Local Code

After set up the YEAR, DATE and TIME, press **[SET]** to access the LOCAL AREA CODE setup, and the first of five codes will flash. Press **[CLID▼or▲]** to select the digit and press **[SET]** to confirm. Use the same method to set up the other codes. If you set up an area code, eg: 248-1234567, when you receive a telephone number from this area code 248, Caller ID will show 1234567 only.

5. Set Prefix Code

After set up the LOCAL CODE, the first of three codes will flash. Press **[CLID▼or▲]** to select the digit and press **[SET]** to save selection. Use the same method to continue setting each code.

6. Set the Ring Melodies

After set up the PREFIX CODE, press **[SET]** to access the RING MELODIES setup. Press **[CLID▼or▲]** to select the music(1-16) and press **[SET]** to confirm.

7. Set the Ring Volume

After set up the RING MELODIES, press **[SET]** to access the RING VOLUME setup. Press **[CLID▼or▲]** to select the ring volume(1-4) and press **[SET]** to confirm.

8. Set Flash Time(This setting for using behind of PBX only)

After set up the RING VOLUME, press **[SET]** to enter the FLASH TIME setup. Press **[CLID▼or▲]** to select the flash time(100ms, 200ms, 300ms,400ms,600ms, 900ms) and press **[SET]** to confirm.

9. Set Pause Time(Default in 2.4S, No need to set if it meet PBX Uses)

After set up the flash time,press **[SET]** to enter the PAUSE TIME setup.press **[CLID▼or▲]** to select the pause time(1.2,2.4,3.6ms)and press **[SET]** to confirm.

9. Set DTMF or Pulse Mode(Default in DTMF, No need to set if it meet telecom dialing mode)

After set up the FLASH TIME, press **[SET]** to access the DTMF or PULSE MODE setup. Press **[CLID▼or▲]** to select the mode(DTMF or PULSE) and press **[SET]** to confirm.

OPERATION

A.TELEPHONE

1.Make a Call:

Pick up the handset or press **[📞]** to get dial tone and dial the number. When the called party answers the phone,the LCD will time the call automatically.

2.Pre-dial:

In on-hook status, dial the phone number and press **[📞]** or pick up the handset, The number will be dialed automatically.

3.Answer the Call:

Pick up the handset or press **[📞]** to answer the call.

4.End a Call:

Hang up the handset or press **[📞]** to end the call.

5.Switch Talk Mode from Handset to Speakerphone:

Press **[📞]**,then hang up the handset to talk through the speakerphone.

6.Switch Talk Mode from Speakerphone to handset:

Pick up the handset ,the talk mode will switch to handset automatically.

7.Mute:

In talk mode, press **[HOLD]**,you may hear the call party's talking from handset ,but the call party can't hear you ,press **[HOLD]**again to release mute.

8.Line Hold:

a.In handset talking status,press **[HOLD]**& hang up handset, line will be held with music,pick up handset or press **[📞]** to release.

b.In speakerphone status,press **[HOLD]**,line will be held with music,pick up handset or press **[📞]** to release.

9.Hold Release From Extensions:

Hold can be released by answer the call from extensions also.

10.Flash:

This function is mainly for PBX systems. If you have call waiting service from your telephone company, it will also work for call waiting service.


a. Press **[FLASH]** to transfer the line to another extension if the phone runs on a PBX system.

b. Press **[FLASH]** for call waiting service from your telephone company.


11.Pause:

Press **[REDIAL/PAUSE]** for a break off of 1.2/2.4/3.6 seconds.

12.Redial:

Pick up the handset or press , press **REDIAL/PAUSE** to redial the last dialed numbers.



13.Out:

In on-hook status,press **OUT** to review the last 16 dialed numbers. press  to dial out.press **DEL** to delete the reviewing number,press and hold **DEL** for 3 seconds to delete all dialed numbers.

14.Auto Redial:

In on-hook status, press **AUTO RD/▲** to auto redial the last dialed number continuously until the phone is answered.

15. 10 Sets of One-Touch Speed Dial Memories:

- a.STORE:In on-hook status, press **STORE** , then input the phone number you wish to store ,and press the specific speed dial memory key M1 (M2~M10).
- b.DIAL:Pick up the handset or press ,Then press M1 (M2~M10) to dial the stored phone number automatically or press M1 (M2~M10) ,check stored number then press  for predial .

B.CALLER ID

1. Caller ID Review:

In on-hook status, press **CLID▼ or ▲** to review the caller's phone number and the time they called .


2. Delete Caller IDs:

- a. When you check the incoming calls, press **CLID▼ or ▲** to find the call you wish to delete. Press **DEL** once to delete a single call.
- b. When you check the incoming calls, press **CLID▼ or ▲** to review Caller IDs, Press and Hold **DEL** for 3 seconds to delete all calls.

3. Call Back from the Caller IDs:

In on-hook status, press **CLID▼ or ▲** to select the call you wish to dial from the Caller ID list, press **CALL BACK** and the number will be dialed. If you have set up prefix code , press **CALL BACK** twice to add prefix code in front of telephone number automatically.

4. Set/Remove/Dial VIP Number:

- a. In on-hook status, press **CLID▼ or ▲** to select a number you wish to set as a VIP number. Press **VIP** and the number will be set . VIP number will be kept in Caller ID list all the time. You can set 20 VIP numbers at most.
- b. When you review the Caller ID numbers, press **VIP** again to remove the VIP setting.
- c. Press **VIP & ▼ / ▲** to select the VIP number which you want to dial,press **CALL BACK** or  to dial.

C.PHONE BOOK PART

1. Store Phone Book Memories:

In on-hook status, press **□**. LCD will display EDIT ↑ SEARCH ↓

2. Store Phone Book Memories:

- a. Press **CLID▲** to enter edit status. Enter the name.
- b. Press **□** to access the telephone number input page and enter the telephone number.
- c. Press **□** to save and enter another name and phone number. You can store 80 entries at most in the phone book. Once you reaches 80,the LCD will display MEMORY FULL.

3.Review phone book


In on-hook status or picking up the handset status, press **□** to access the phone book page,LCD will display "ADD ↑", "search ↓".

- a. press **▲**, TO ENTER edit status, the operation is same as the above store phone book entries.
- b. press **▼**,LCD will display "PLS INPUT NAME", press **▲**/**▼** to review the phone book record, press **▲** to review the phone book record from the first one to the last one. press **▼** to review the phone book record from the last one to the first one
- c. press **▼** ,LCD will display"PLS INPUT NAME",if you enter the inital letter of the phone book, then you can review the phone book by the first letter of the name

4. Delete Phone Book:

In phone-book-review status, press and hold **□** for 3 seconds to delete the reviewing phone book.

5. Dial from Phone Book

- a. In on-hook status, when review the phone book and find the number you wish to dial, press  or pick up the handset to dial out.
- b. In off-hook status, when review the phone book and find the number you wish to dial, press **CALL BACK** to dial the stored phone number.

TROUBLE SHOOTING GUIDE

SYMPTOM	CAUSE AND REMEDY
Phone does not working	Is the phone cord connected properly both in wall jack and in the base unit?
Ringer volume is too low	Is ringer volume set on low?
Phone can receive but can not make calls	The Tone/pulse setting has to meet the local telecom dialing mode.

WALL MOUNTING

The phone can be wall mounted if user needed, When wall mounting, user has to change the position of the handset hook guide & fix the base unit on the wall, the steps as below.

1. To change the position of handset hook guide.
 - a. Remove the handset hook guide by sliding upwards.
 - b. Rotate 180 degrees and reinsert. The handset hook guide will be ready for wall mounting.

(Figure 1)

2. Fix the base unit on the wall
 - a. Choose a location close to telephone wall jack.
 - b. Draw mark 83 mm vertically apart on the wall. (you can use Figure 2)
 - c. To check the location of mark before drilling to make sure no any wiring or hidden pipes behind the wall.
 - d. Drill and then Insert screws into the wall and leaving the heads around 2 millimeters out of the wall, adjusting it if Necessary.(Figure 3)
 - e. Fix the base unit on the wall

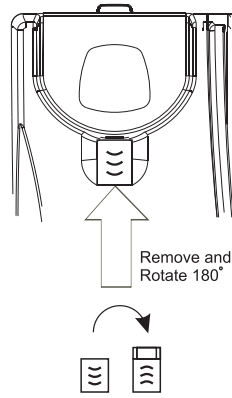 


Figure 1

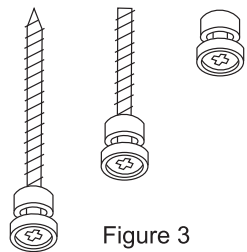 


Figure 3

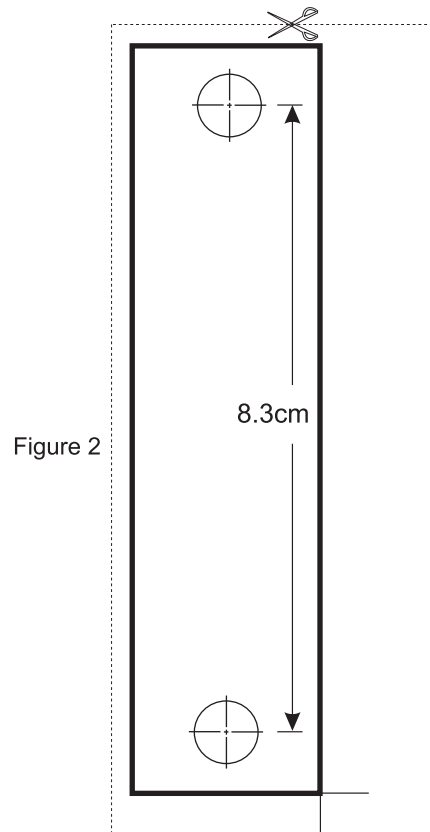 


Figure 2