

Sela

55 Minutes Digital Answerer



Features

1. 55 minutes memory capacity for ICM(incoming message), OGM (Outgoing Message) & 2-way recording
2. Voice announcement & date/time stamp
3. 2-way recording to record telephone conversation up to 50 Minutes
4. Auto disconnect from any parallel extension
5. Play all or individual ICM
6. ICM rewind/forward/repeat
7. Toll saver
8. CBT(Call Break Through)
9. CPC(Call Party Control Detection)
10. 4-digits user programmed security code for remote control and CBT
11. Remote turn on/off,play,stop,repeat, skip,delete ICM, change OGM,room monitor etc..
12. Power:AC Adapter

MODEL: SL-722

PLEASE READ OPERATION MANUAL BEFORE USING YOUR ANSWERING MACHINE AND KEEP IT FOR FURTHER REFERENCE

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
LOCATION AND FUNCTION OF CONTROLS.....	3
INSTALLATION.....	5
FUNCTION SET UP.....	5
OPERATION.....	6

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons.


1. Read and understand all directions.
2. Follow all warnings and instructions.
3. Unplug this product from the wall outlet before cleaning by damp cloth .
4. Do not use this product near water.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Do not allow anything to rest on the telephone cord. Do not locate this product where the cord will be abused by persons walking on it.
7. Never put foreign objects of any kind into the product as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
8. To reduce the risk of electrical shock, do not disassemble this Product, Take it to a qualified service person if service or repair work is required. incorrect opening and reassembly may cause risk.
9. Adjust only the controls that are covered by the operating instructions. Improper adjustment of controls may result in damage that could require extensive work by a qualified technician.
10. Refer servicing to qualified service personnel if the following should occur:
 - When the phone line or plug is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following operating instructions.
 - If the product has been dropped or the cabinet has been

damaged.

- If the product exhibits a distinct change in performance.


11. Avoid using a telephone during an electrical storm. There may be a risk of electrical shock from lightning.
12. Do not use the telephone in the vicinity of a gas leak.
13. The handset receiver may retain dangerous materials such as metallic pins and staples because the receiver is magnetic.

LOCATION AND FUNCTION OF CONTROLS

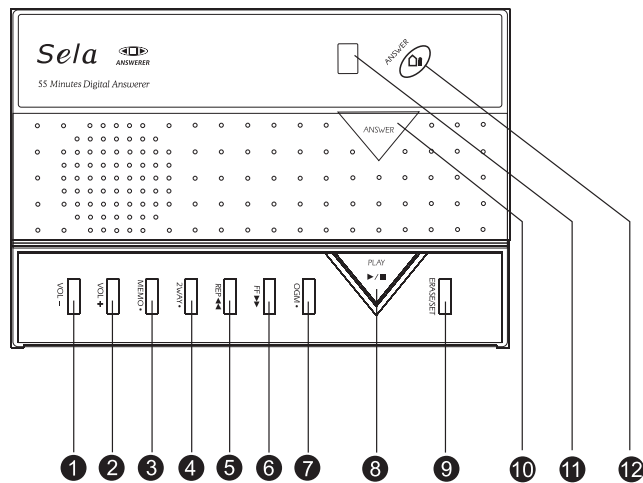

- 1 VOL+.....Press to adjust speaker volume higher(8 levels)
- 2 VOL-.....Press to adjust speaker volume lower(8 levels)
- 3 MEMO •Press & hold for 2 seconds to start recording memo.
- 4 2WAY •press & hold for 2seconds to start 2 way recording for phone conversation
- 5 REP ◀◀a.Press to play the previous message during message playing .
b.Adjust settings in setting mode.
- 6 FF ▶▶a.Press to play the next message.


- 7 OGM(Outgoing message).....a. Press & hold for 2 seconds to start recording outgoing message,press again to complete OGM recording.
b. Press to play outgoing message.
- 8 PLAY ▶/■.....a. Press to play new messages sequentially, press again to stop playing.
b. Press & hold for 2 seconds to play all messages sequentially, press again to stop playing.
- 9 ERASE/SET..... a .press & hold for 2 seconds to enter setting mode.
b. press to announce time,date, rings to answer and Toll saver , record time for each messages, remote security code and CBT code.
c.Press to erase the message during message playing.
d.Press & hold for 6 seconds to erase all messages during message playing.
- 10 ANSWER(ON/OFF).....a. Press to activate answer on,press again for answerer off
b. press & hold for 6 seconds to return to default setting
- 11 Numeric LED Display.....a.Answer on:Show number of total messages.
b. Answer off: " - " shows on the screen.
c. Setting mode: " P " shows on screen.
d.During message playing:LED blinks in circle.
e. During OGM/MEMO/2 WAY recording: "≡" blinks on screen.

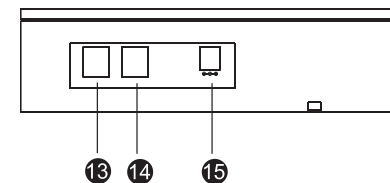

- 12 Answer LED Indicator.....a. Blinking when there is incoming call.
b. Blinking periodically if there are new messages.
- 13 LINE JACK.....Connect to telephone line.
- 14 TEL JACK.....Connect to telephone.
- 15 DC JACK.....Connect to the power adaptor.

INSTALLATION

1. Plug the AC adaptor into the DC power jack of the device and plug the other end into the electrical socket.
2. Plug one end of line cord into the line jack of the device, plug the other end to the telecom's wall jack.
3. Plug one end of line cord to the telephone jack of the device ,plug the other end to telephone.

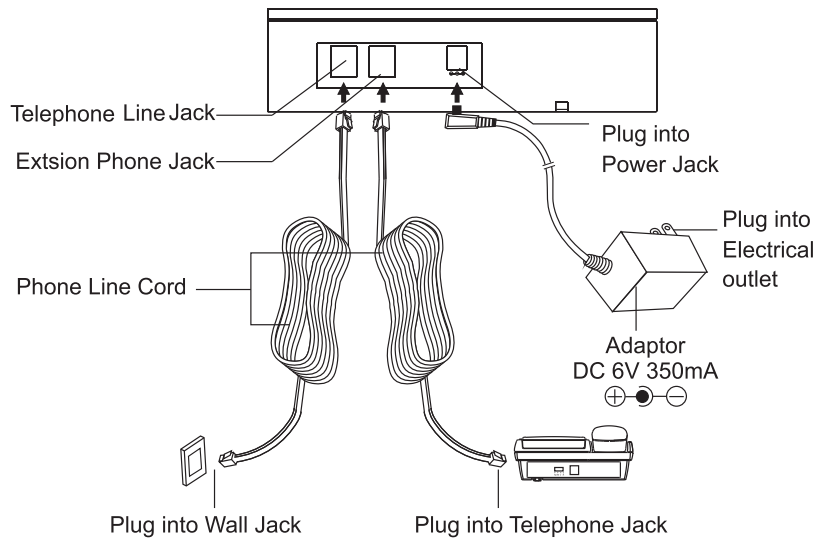

FUNCTION SET UP

Press & HOLD **ERASE/SET** for 2 seconds to enter setting mode, press **REP ◀◀** and **FF ▶▶** and follow the voice annoucement to adjust settings.

1. Hour

0-23

2. Minute

0-59

3. Date

Sunday to Monday

4. Ring and Toll Saver

To set 2 to 5 rings and Toll saver mode(default: toll saver)

In toll saver mode,The answerer will be activated after 2 rings once there are new messages on the system,and the answerer will be activated after 5 rings if there is no unheard incoming message,this feature allows user to call answerer for remote playing and hang up the call between 2 and 5 rings to save the telephone fee.

5. ICM (Incoming Message)Recording Time

To set 1 to 4 minutes(default: 2 minute) for the maximum recording time on each incoming message.

6. Security code(Default password: 1234)

Used for remote controlling,users may change it to any other 4 digits.

7. CBT code(Call Breakthrough,Default setting: 5678)

The answerer is equipped to alert you to an urgent call.with CBT,incoming caller who know your CBT code will have the ability to bypass the outgoing message and cause the answerer to sound a specified ring.This is designed to alert you of an urgent call,if you are at home screening your calls.The CBT code has a factory default of 5678.This code can be changed to any number between 0000 and 9999 .

OPERATION

1. OUTGOING MESSAGE RECORDING (OGM)

- a. The answerer provide a prerecorded OGM ,But user may record personal OGM as the step b.
- b. During standby mode, press & hold **OGM** for 2 seconds to start recording, press again to stop recording. Maximum recording time is 30 seconds.
The suitable recording range is 40cm away from the device.

2. MEMO RECORDING

During standby mode, press & hold **MEMO** for 2 seconds to start recording memo messages, press again to complete memo recording. Maximum recording time is 50 minutes.

3. 2 WAY RECORDING TO RECORD PHONE CONNERSATION

- a. During a phone conversation, press & hold **[2WAY]** for 2 seconds to start 2 way recording.
- b. Press **[2WAY]** again to complete 2 way recording, maximum recording time is 50 minutes. 2 way recording will stop automatically if following activities are detected.
 - 1) The call is hung up
 - 2) Memory full

4. ANSWERER ON/OFF

- a. Press to activate answerer on, press again for answerer off.
- b. LED will flash, if there are incoming messages on the answerer.

5. PLAYING INCOMING, MEMO, 2WAY RECORDING MESSAGE

- a. Press **[PLAY]** to play messages, press again to stop playing.
- b. Press **[FF▶▶]** to play the next message.
- c. Press **[REP◀◀]** to play the previous message.

6. MESSAGE ERASE

- a. Erase one message
During message playing, press **[ERASE/SET]** to erase the playing message
- b. Erase all messages
During message playing: press & hold **[ERASE/SET]** for 6 seconds to erase all messages.

7. ANSWERER STATUS CHECKING

During standby mode: press **[ERASE/SET]**, the answerer will announce time, date, rings to answer or toll saver, ICM recording time for each message, remote security code & CBT code.

8. SPEAKER VOLUME ADJUSTMENT

Press VOL+ or VOL- to adjust speaker volume(8 levels).

9. CALL SCREEN

The answerer can be used to screen the caller. Simply set the unit to answer on mode. when an incoming call comes, adjust the volume control so that you can hear the incoming caller leaving their message. if you wish to speak to the caller, simply pick up the handset. The answerer will automatically stop recording.

10. REMOTE CONTROL

When user is not at home & the answerer is on, user may dial the phone number, Press **[#]** during OGM playing, then key in security code, rapid "beep beep beep" sound means the code is incorrect, a long "beep" sound means you have entered the remote control mode. During remote control mode, enter the key combination for the following options:

- a. Press **[#]→[2]** to play new messages or press **[#]→[5]** to play all message.
- b. During message playing:
 - 1) Press **[#]→[4]** to play previous message(REP◀◀)
 - 2) Press **[#]→[6]** to play next message(FF▶▶)
 - 3) Press **[#]→[8]** to erase the playing message.
 - 4) Press **[#]→[*]** to exit remote control
 - 5) Press **[#]** to stop
- c. Press **[#]→[1]** to set answerer on
- d. Press **[#]→[3]** to set answerer off
- e. Press **[#]→[7]** to record OGM
Start recording OGM after a "beep" sound, press **[#]** to stop OGM recording and return to options. Maximum recording time is 30 seconds
- f. Press **[#]→[9]** to record MEMO
- g. Press **[#]→[0]** to start room monitor
The monitor period is 30 seconds, press **[#]→[0]** to extend monitor period
- h. Press **[#]** to stop the current operation

11. TOLL SAVER

In toll saver mode, The answerer will be activated after 2 rings once there are new messages on the system, and the answerer will be activated after 5 rings if there is no unheard incoming message, this feature allows user to call answerer for remote playing and hang up the call between 2 and 5 rings to save the telephone fee.

12. CBT (CALL BREAK THROUGH)

When answerer is working on call screen mode, the incoming callers who know the CBT code may press **[#]** during OGM playing, then key in CBT code, the answerer will sound specified ring to alert user to an urgent call.

13. REMOTE TURN ON THE ANSWERER

When user was absent and the answerer was in off mode, user may turn on the answerer through remote control as below steps:

- a. Call the answerer
- b. After 10 rings, the answerer will answer
- c. Key in the security code
- d. Press **[#]→[1]** to remote turn on the answerer.

If no security code entered, the answerer will turn off after 8 seconds.

14. USERS MAY BRING THE REMOTE CONTROL OPERATION GUIDE (Figure R) FOR REFERENCE IF NEEDED

TROUBLE SHOOTING GUIDE

1	Will not operate	Are the power supply and telephone line cords plugged into the device and the appropriate power/telephone jacks of your residence/business?
2	LED display are off	Is the phone line cord or power supply properly plugged in?
3	Will not record the incoming message	Is your memory full?The answerer will record up to 52 minutes of ICM/MEMO/2WAY RECORDING message
4	Cannot operate remote control	Is your security code correct?
5	Cannot play the current time	Does clock need to be set or reset?
6	Message playback too loud or difficult to hear	Adjust volume control key to desired level.

Figure R

✂

Sela
Answerer Remote Control
Operation Guide

1.Call the answerer
2.Key in security code
default:1234, new:
3.To play the remote control functions as below

ANSWER ON	PLAY NEW MESSAGE	ANSWER OFF
#→1	#→2	#→3
REP◀◀	PLAY ALL MESSAGE	FF▶▶
#→4	#→5	#→6
RECORD OGM	ERASE	RECORD MEMO
#→7	#→8	#→9
EXIT REMOTE CONTROL	ROOM MONITOR	STOP
#→✳	#→0	#

• Your CBT(call break through) code
default:5678, new: