

Sela

Making the highest quality phone in the world

Basic corded phone with flash, redial, paper faceplate, message waiting & incoming call indication



Features

1. Battery free solution
2. Cellular phone RFI noise immunity
3. Last number redial
4. Flash for behind PBX uses
5. Mute
6. Ringer volume Hi-Low adjustable
7. Desk/Wall mountable

MODEL: SL-9292

 
PLEASE READ OPERATION MANUAL BEFORE USING YOUR NEW TELEPHONE AND KEEP IT FOR FURTHER REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS


When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons.

1. Read and understand all directions.
2. Follow all warnings and instructions.
3. Unplug this product from the wall outlet before cleaning by damp cloth .
4. Do not use this product near water.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Do not allow anything to rest on the telephone cord. Do not locate this product where the cord will be abused by persons walking on it.
7. Never put foreign objects of any kind into the product as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
8. To reduce the risk of electrical shock, do not disassemble this Product, Take it to a qualified service person if service or repair work is required. incorrect opening and reassembly may cause risk.
9. Adjust only the controls that are covered by the operating instructions. Improper adjustment of controls may result in damage that could require extensive work by a qualified technician.
10. Refer servicing to qualified service personnel if the following should occur:
 - When the phone line or plug is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following operating instructions.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
11. Avoid using a telephone during an electrical storm. There may be a risk of electrical shock from lightning.
12. Do not use the telephone in the vicinity of a gas leak.
13. The handset receiver may retain dangerous materials such as metallic pins and staples because the receiver is magnetic.

LOCATION AND FUNCTION OF CONTROLS

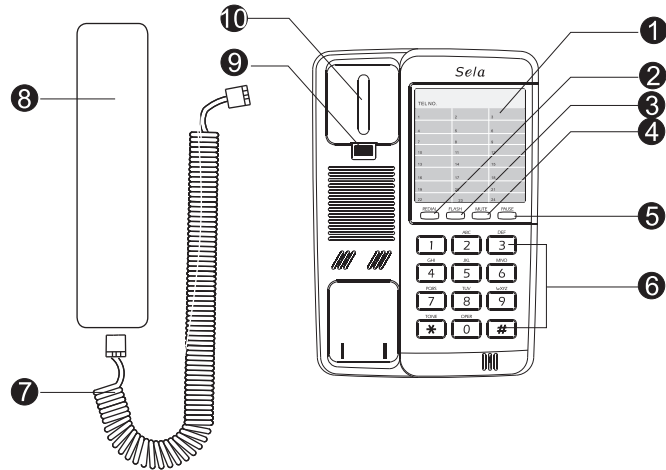


- ① Paper Faceplate.....To write telephone number or memo.
- ② Redial.....Press to dial the last dialed number.
- ③ Flash.....To use behind PBX system.
- ④ Mute.....Press and hold the key to mute.
- ⑤ Pause.....In dialing status,press for a break of 3.6 seconds.
- ⑥ Dialing Key(0-9,*,#).....Dial numbers and extension.
- ⑦ Handset Cord.....To connect handset.
- ⑧ Handset.....For speaking & listening.
- ⑨ Handset Hook Guide.....Turns 180 degrees to hang up the handset when the unit is mounted on the wall.
- ⑩ Hook On/Off Switch.....Press to end a call.
- ⑪ Line cord jack.....Connect telephone to wall jack.
- ⑫ Tone/Pulse Switch.....Select to meet local telecom Tone or Pulse dialing mode.
- ⑬ Ringer HI/LOW Switch.....To adjust the ringer volume.

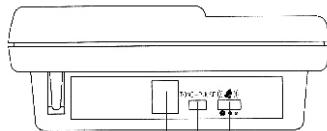 

⑪ ⑫ ⑬

INSTALLATION

 - 1.Connect one end of handset coil cord into the jack of the handset, connect the other end into the jack of the base unit.
- 2.Plug one end of phone line into the line cord jack of the base unit ,connect the other end into the wall jack.

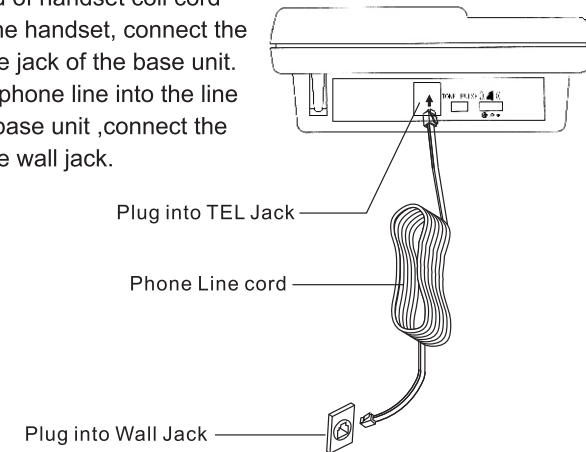

OPERATION

- 1.Make a call: Pick up the handset to get dial tone and dial the number.
- 2.Answer the call: Pick up the handset to answer the call.
- 3.End the call: Hang up the handset to end the call.
- 4.Redial: Pick up the handset, press **REDIAL** to redial the last dialed number.
- 5.Flash: Used for line transfer or intercom behind the PBX systems.
- 6.Mute: Press and hold the key to mute. you may hear the call party's talking from the handset,but the call party can't hear you.Mute will be released when release the key.
- 7.Pause: Press PAUSE for a break off of 3.6 seconds during dial.

TROUBLE SHOOTING GUIDE

SYMPTOM	CAUSE AND REMEDY
Phone does not working	Is the phone cord connected properly both in wall jack and in the base unit?
Ringer volume is too low	Is ringer volume set on low?
Phone can receive but can not make calls	The Tone/pulse switch has to meet the local telecom dialing mode.