

Qualitel
TRANSMISSION

Eurofone 210
Digital Cordless Telephone (DECT)



Photo may differ from the actual product.

Internet:
www.qualitel.co.za

© Qualitel 2011
20405248xx_ba_b0
SV 20405248

User manual

Eurofone 210

Introduction

Thank you for purchasing our product which adopts excellent workmanship and exceptional reliability.

Your telephone is designed to give you flexibility in use and high quality performance. To get the most from your new telephone, we suggest that you take a few minutes to read through this instruction manual to familiarize yourself with all the features of the product.

The product is guaranteed for 12 months from the date of purchase shown on your sales receipt. The guarantee does not cover damage caused by misuse or negligence or by excessive voltage. For example, faults on the telephone line or lightning.

Eurofone 210

Safety Instructions

When using your telephone instrument, the following basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons:

- Read, understand and follow all warnings and instructions.
- Unplug the product from the wall outlet before cleaning. Do not use liquid cleaning materials nor aerosols. Use a soft damp cloth for cleaning.
- Do not place this product on unstable surfaces. The product may drop, causing serious damage to the product.
- Do not overload wall outlets and extension cords as this can result in fire or electric shock.
- Never push foreign objects of any kind into this product through cabinet slots as they may affect dangerous voltage points or short circuit parts that could result in fire or electric shock. Never spill any liquids on the product.
- Avoid moving or disconnecting this unit during a heavy storm, as there may be a risk of electric shock from lightning. Avoid conversations during an electric storm.
- Do not disassemble this product, this will void the warranty, please send the phone to a service center for any defects. If service or repair work is required, contact a qualified technician.
- Do not use the product in the vicinity of a gas leak.

Eurofone 210

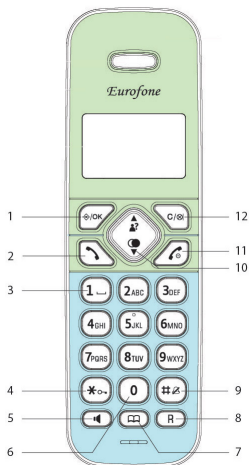 
Contents

Keys	4
Display symbols	5
Range and Location of Telephone	6
Battery advice	6
Connecting the Phone	7
Set Date and Time	8
Placing a Call	8
Turn off the ringer	9
Set speaker/loudspeaker volume	9
Switch handset off	9
Redial a Number	9
Mute the Handset Microphone	10
Keypad lock	10
Paging – Locate mislaid handsets	10
Phonebook	10
Call list	11
Voicebox (network answering machine)	12
Extending the Eurofone 210	12
Converse with several call partners	13
Handset settings	14
Base station settings	15
Reset the Phone	15
Appendix	15
Care and Warranty Conditions	16

Eurofone 210

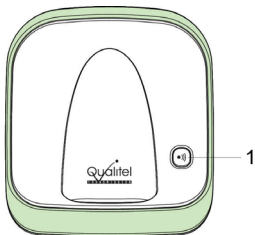 
Keys

Handset Keys



1. Confirmation key / Menu key / During conversation: Internal call
2. Talk Key
3. Key 1 / Insert a space
4. Star key / In standby: Long press to activate/deactivate the keypad lock.
5. Hands free / loudspeaker key
6. Key 0 / Insert a dialing pause
7. Open phonebook
8. Key R with Flash function
9. Hash key / In standby: Long press to switch handset ringer on/off.
10. Navigation keys
 - ▲ : Open call list / Increase volume during conversation / Scroll up in a list or menu.
 - ▼ : Open redial list / Decrease volume during conversation / Scroll down in a list or menu.
11. End call key / Back key / Press and hold down to switch the handset off. Press briefly to reactivate the handset.
12. Delete characters / Back in a submenu / Long press in standby: back to idle / In idle mode: Internal call. During conversation: Mute handset micro-*phone*.

Base Station Eurofone 210














Base Station Eurofone 210:

1. Paging key

Eurofone 210

Display symbols

-  Scroll up/down in a list or menu.
-  Symbol is displayed when the handset is within range of the base station. Flashes when the handset is out of range or not registered to the base.
-  Internal call in progress. Flashes for incoming internal calls.
-  Call in progress.
-  Hands Free/loudspeaker activated.
-  Ringer switched off.
-  Alarm set.
-  Keypad locked.
-  You have new messages in your voicebox (network answering machine).
-  Batteries fully charged.
-  Batteries empty.

Eurofone 210

Range / Location

To obtain the best possible range, we recommend positioning the telephone in a location central to your sphere of activity. Avoid positioning the telephone in niches, recesses and behind steel doors.

The maximum range between base station and handset is approximately 300 meters outdoors and 50 meters indoors. Depending on the surrounding conditions as well as spatial and structural factors, the range may be smaller. Silent zones can occur due to the digital transmission in the frequency range used – even within the range, depending on the structural environment. In this case the transmission quality may be reduced through the increased incidence of short breaks in transmission. Normal call quality can be restored if you move slightly out of the silent zone. If the range is exceeded, the call will be disconnected unless you move back into range within ten seconds.

Battery advice

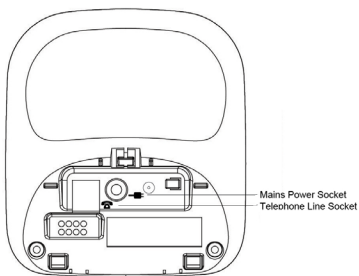
Use only the original batteries (2 x NiMH, AAA, 1.2 V 500mAh) as well as the original power supply (6 V DC / 300 mA) for Eurofone 210.

The handset operating times (standby 100 hours/active 10 hours) and charging times apply only if the battery is charged to the defined minimum capacity (1.2 V / 500 mAh). Charging is electronically controlled to ensure optimal charging and care of batteries in different charge states. Full capacity is achieved only after several charging cycles.

Note: Using other rechargeable batteries or non-rechargeable batteries/primary cells can be dangerous and cause malfunctions or damage to the telephone. Do not short-circuit the batteries (danger). In particular, avoid inadvertent short-circuits during storage and transport e.g. bunch of keys, metal panels or similar objects, and make sure the batteries do not come into contact with greasy materials. When not in the handset, therefore, batteries should be stored only in insulating packaging. Ensure also that the contacts do not touch greasy parts. Rechargeable batteries can become warm while recharging. This is a normal occurrence and is not dangerous.

Eurofone 210

Connecting the phone



- Before you can start using your telephone you must plug in the telephone connector cable and the mains cable.
- Insert the batteries in the battery compartment. Make sure the polarity is correct.
- To charge the batteries, insert the handset in the base station. The animated battery symbol on the handset signals the charging procedure. The batteries will take around 14 hours to fully charge (initial charge).

Set language

NOTE:

Use the navigation keys to scroll (up / down) through the list of options.


Default setting on delivery:

- English

Selectable Languages:

- Deutsch, Francais, Italiano, Turkce, Espanol, Cesky, Emhnika, Svenska, Dansk, Norsk, Nederlands, Suomi, Polski

The language of the display texts can be changed in the menu

Press , Select **HS Settings** and press OK->Select **Language**,

Eurofone 210

press OK, Select desired Language, Press OK

Set date

- Press **[OK]**, select **HS Settings** and press **OK**.
- Select **Date Time** and press **OK**.
- Date format displays on LCD, press **OK**.
- Select date and time format. Press **OK**. (Scroll through the list using the **navigation keys**)
- Select **SET DATE**, press **OK**.
- Enter date and time (use numerical keypad) and press **OK**.
- Press the **End call key** to return to standby mode.

Set time

- Press **[OK]**, select **HS Settings** and press **OK**.
- Select **Date Time** and press **OK**.
- Select Time format and press **OK**.
- Select the time format 24HR or 12HR.
- Enter the time using the numerical keypad, press **OK**.

Placing a call

- Dial the desired number using the keypad.
- Press the **Talk key** or **[M]** key.

End the call

- Press the **End call key**.

 

Answering a call

 
- Incoming calls are signalled by a ring tone on the handset.
- Press the **Talk key** or **[M]** key and conduct your conversation.
End the call
- Press the **End call key**.

Please note: Calls cannot be made if the battery is almost discharged or the handset is out of range of the base station.

Eurofone 210

Turn off the ringer

Press  key for approx. 3 seconds in standby mode: the ringer is switched off. The ringer icon is displayed on the LCD. To turn the ringer on, press again key  for approx. 3 seconds.

When a call is signalled (you hear the ringtone), press key . The ringer is turned off for this call.

Set speaker/loudspeaker volume

You can adjust the speaker/loudspeaker volume during a conversation (5 levels available).

Select the desired volume using the **Navigation keys**.

Switch handset off




- Press and hold the **End call key** (approx. 5 sec).
- Press and hold again the **End call key** (approx. 5 sec) to reactivate the handset.

Redial

The Redial list contains up to 5 entries.

- Press the navigation key  and select the desired entry.
- Press the **Talk key**.

Edit redial list

- Open the Redial list (Press the navigation key )
- Press the left soft key 
- Select a function from the list:
 -  **PB** – Add number to the phonebook.
 - **Delete** – Delete the entry.
 - **Delete All** – Delete the entire redial list.

9. Press 

Eurofone 210

Mute the handset microphone

You can temporarily mute the handset microphone to talk to someone else in the room without the caller hearing. Press key **[C/⊗]** during a conversation.

To reactivate the microphone, press key **[C/⊗]** again.

Keypad lock

Activate keypad lock

- Press the **Star key** approx. 3 sec.
- The Lock icon displays on the LCD

Deactivate keypad lock

- Press again the **Star key** approx. 3 sec.

Paging – Locate mislaid handsets

All registered handsets ring for a short time, when the **Paging key** on the base is pressed. To stop the ring press the **End call key** on the handset or the **Paging key** on the base.

Phonebook

You can store up to 20 names and numbers in the phonebook on each handset.

Names can be up to 12 letters long and numbers up to 20 digits.

You can combine different numbers in groups with the same ring melody.

Digits / Characters

Different characters are printed on each key of the keypad. The entries in the phonebook are sorted alphabetically. To select different characters on the keypad press the key multiple times (i.e. to enter the letter B, press the number 2 key twice).



Press and hold **0** key to insert a pause inside a phone number. "P" appears on the display.

Eurofone 210


 
NOTE:

The pause "P" is useful when the Eurofone 210 is connected behind a PABX. Where the PABX requires a second dial tone the pause "P" must be inserted between the PABX access number (normally 0 or 9) and the telephone number.

Add new entries in the phonebook

- Press /OK
- Select **PHONEBOOK** and press **OK** to confirm.
- Press /OK. Select **ADD** and press **OK** to confirm.
- Enter the desired name, number and ringer melody.
- Press **OK** to confirm.

Edit phonebook

- Press /OK, Press /OK
- Select a function from the list:
 - **ADD** – as described above.
 - **VIEW** – View number and melody of the selected entry.
 - **EDIT** – Select the desired entry and edit it.
 - **DELETE** – Delete entry.
 - **DELETE ALL** – Delete the entire phonebook.
 - **FREE SPACE** – View the number of free space.

 
Call list

The caller's number is displayed on the handset. The call list can contain up to 10 entries. **NEW CALLS** (missed calls) are displayed as **NEW CALLS** on the LCD display. Once the missed calls have been reviewed the **NEW CALLS** notification will disappear from the display.

To use this function, the caller's number must be transmitted (CLIP). Contact your network operator for further information. You must have an active caller ID service from your Network operator / service provider.

 
Eurofone 210

Call a number from the call lists

- Press . Select **Call Lists**.
- Select the desired entry from the list.
- Press the **Talk key**, the number is dialled or press left soft key and select an edit function from the list.


If the caller's number is suppressed, only Call is displayed.

Edit call list

- Open the call list, press the  key.
- Select a function from the list:
 - **ሰጠኛ ትዕ PB**– Add number to the phonebook.
 - **ወይይት**– Delete entry from the call list.
 - **ወይይት ልዩ**– Delete the entire call list.

Voicebox (network answering machine)

You can forward the incoming calls to your operator's network answering machine (Voicebox).

This function must be enabled by your network operator. New Voicebox messages are signalled on your handset display by  (dependent on network operator).

Extending the Eurofone 210

The delivered handset is already registered on to the base station. In standby the internal number of the handset is displayed.

You can register up to 5 handsets to your base station. If you register your Eurofone 210 handset with a "third party" base station or a "third party" handset on your Eurofone 210 base station (GAP), you may not be able to use some functions or only to a limited extent.

Eurofone 210

Register new handsets

Accessory handsets must be registered to the base station.
The base station must be set for registration mode (Declaration).

- Press **•••••** on the base station for approx. 5 seconds before declaration, then release the key.
- The base is now in registration mode.
- Press **☎/OK** on the handset you wish to register, select **R E G I S T R A T I O N** and press **OK**.
- Enter the system pin number (Default Pin = 0000) Press **OK**.
- If the registration is successful you will hear a confirmation signal and the handset displays handset xx (xx the allocated Handset number).

Conversation with several call partners

During a call you can make a second internal call (enquiry call), switch between call partners (brokering) or simultaneously converse (3-way conference call) without the need for two telephone lines.

Internal conversation / Internal call

- Press **C/OK**. The registered handset numbers will display.
- Enter the desired handset number to intercom with.

If you receive an external call while you are on the phone to an internal call partner, you will hear an incoming call alert. End the internal call by pressing the End call key. Press the Talk key. You are connected to the external party.

Call transfer to another handset

You are conducting an external call and you want to transfer it to another handset.


- Press **☎/OK**, select **I n t e r c o m**, Press **☎/OK**, enter the desired handset number of the internal party.

Eurofone 210



- Press the **End call key** to transfer the call to the other handset.

Conference

You are conducting an external call.

- Press , select **INTERCOM**, Press **OK**, select the desired handset number of the internal party.
- Press the **Star key** for approx. 3 sec. when the internal party responds. The three call partners are connected.
- Any teleconference partner can press the **End call key** to leave the conference and end the call.

Handset settings

- Press , select **HS SETTINGS** and press **OK**.
- Select a function from the following list:
 - **Alarm** – The activated alarm is displayed in standby mode by . The alarm sounds for 30 seconds or can be deactivated immediately by pressing any key. The volume is the same as for the ringtone.
 - **Ring Setup** – Select the desired ringer melody for internal and external calls.
 - **Tone Setup** – Activate or deactivate the following options:
 - Key Tone** – Every time a key is pressed, a brief beep is heard.
 - Battery Tone** – The batteries are almost empty. Insert the handset in the base station for charging.
 - Out of Range** – A warning beep is sounded if you exceed the maximum range.
 - **Language** – Choose the language for the display texts.
 - **Rename HS** – To better distinguish between handsets, you can give each hand-set a name.
 - **HS display** – Select time or handset name for idle mode display.
 - **Auto Answer** – Just pick up the handset from the base to answer a call (without pressing any key).

Eurofone 210

Date & Time— Set the desired date and time format and enter date and time.

Base station settings

The system PIN on delivery is 0000.

- Press **[*]/OK**, select **BS Settings** and press **OK**.
- Select a function from the following list:
 - Delete HS**— Select the handset you want to deregister.
 - Dial Mode**— Tone: Normal dialling procedure on analogue lines.
Pulse: May be required for connecting older telephone systems.
 - Flash Time**— Select **short**, **medium** or **long**.
 - Change PIN**— You can modify the PIN code (0000 on delivery).

Reset

- Press **[*]/OK**, select **Default** and press **OK**.
- Enter the PIN code (0000 on delivery).
- Confirm twice to reset your phone.

Appendix

Using Internet/cable telephone adapters on an analogue port

When using an analogue telephone on the analogue connection of an Internet or cable telephone adapter, not all the described features (in particular caller identification) may function in the same way as with a standard analogue telephone line. This does not mean that the Eurofone 210 is malfunctioning

Several factors can cause a failure of specific features to function:

- The Internet/cable telephony provider may not provide the function on its Internet/cable telephony connection.
- The adapter used to convert Internet/cable telephony to analogue telephony (usually supplied by the provider) may not forward the functions to connected telephones or may forward them in a non-analogue

Eurofone 210

format. If this happens, please check the Eurofone 210 on an analogue fixed line and/or contact your Internet/cable telephony provider.

Care

Your telephone is a sophisticated product in terms of design and construction, and should therefore be handled with care. To clean the telephone, wipe first with an antistatic cloth or a damp, soft leather cloth and then dry using a dry cloth.

Warranty conditions

Your telephone is subject to a guarantee from the date of purchase in accordance with the legal provisions of the country. As evidence of the date of purchase, please keep the sales receipt. All defects attributable to material and manufacturing faults will be corrected free of charge within the warranty period, either by repairing or replacing the defective equipment. The warranty does not cover expendable materials (battery cells), defects which affect the value or use of the equipment only insignificantly, and damage caused by incorrect use, ordinary wear and tear, or manipulation by third parties. This warranty does not cover consequential damage caused by the use, failure or defectiveness of the product. In particular, no liability whatsoever is accepted for damage to property and pecuniary loss. To claim under this warranty, please contact the retailer where you purchased your telephone.

Approval and conformity

This analogue telephone DECT complies with the basic requirements contained in the R&TTE Directive 1999/5/EC on radio equipment and telecommunications terminal equipment.

